
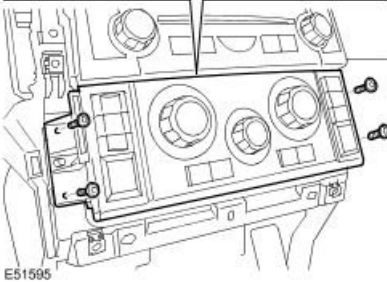


Climate Control Assembly (80.10.02) Removal

- 1 . Remove the floor console. For additional information, refer to [Floor Console \(76.25.01\)](#)
- 2 . Remove the climate control assembly.

- Remove the 4 Torx screws.
- Disconnect the 4 electrical connectors.

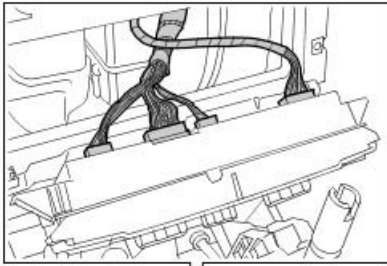

Installation

- 1 . Install the climate control assembly.
- 2 . Install the floor console.

Connect the electrical connectors.
Tighten the Torx screws.