



## Cool Box

### Removal

- 1 . Disconnect the battery ground cable.  
For additional information, refer to [Specifications](#)
- 2 . Remove the floor console upper panel.  
For additional information, refer to [Floor Console Upper Panel \(76.25.11\)](#)
- 3 . Remove the floor console lid.
  - Open the lid.
  - Remove the 2 Torx bolts.
  - Remove the 2 covers.

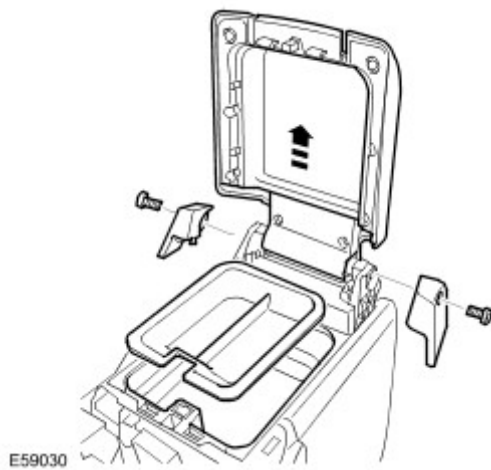


- 4 . Remove the floor console cool box.
  - Remove the 2 Torx screws.
  - Disconnect the electrical connector.

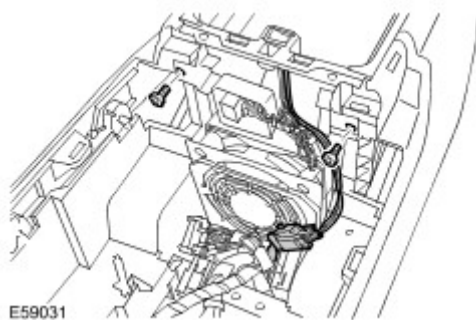


### Installation

- 1 . Install the floor console cool box.
  - Connect the electrical connector.
  - Tighten the screws.

2 . Install the floor console lid.

 Install the covers.

 Tighten the Torx bolts to 3 Nm (2 lb.ft).

3 . Install the floor console upper panel.

For additional information, refer to [Floor Console Upper Panel \(76.25.11\)](#)

4 . Connect the battery ground cable.

For additional information, refer to [Specifications](#)