


## Coolant Expansion Tank (26.15.01)

### Removal


1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.


2. Disconnect the battery ground cable.  
For additional information, refer to [Specifications](#)
3. Remove the cooling fan lower shroud.  
For additional information, refer to [Cooling Fan Shroud \(26.25.11\)](#)
4. Release the windshield washer reservoir filler neck.
5. Release the coolant expansion tank.
  - ▶ Remove the 2 bolts.

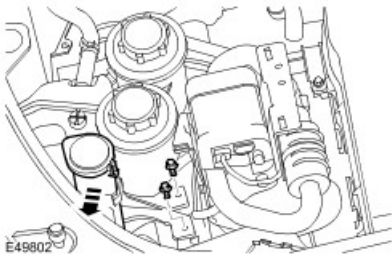


6. **NOTE:**  
Note the position of the differential breather line.  
Release the power steering fluid cooler.
  - ▶ Release the 2 clips.

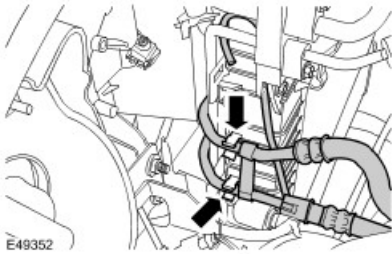

7. Release the power steering fluid reservoir.


8.  **WARNING:** Since injury such as scalding could be caused by escaping steam or coolant, do not remove the filler cap from the coolant expansion tank while the system is hot.

 **CAUTION:** Engine coolant will damage the paint finished surfaces. If spilt, immediately remove the coolant and clean the area with water.

Disconnect the 2 hose from the coolant expansion tank.

- ▶ Position an absorbent cloth to collect fluid spillage.
- ▶ Position a container to collect the fluid.
- ▶ Clamp the hoses
- ▶ Release the 2 clips.

9. Remove the coolant expansion tank.
  - ▶ Disconnect the coolant low level sensor electrical connector.

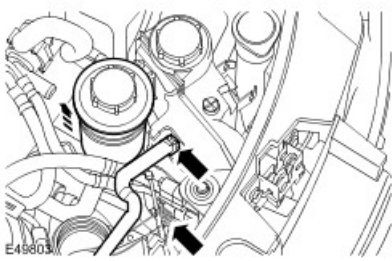


10 . **NOTE:**

Do not disassemble further if the component is removed for access only.

Remove the coolant low level sensor.

11 . Remove the coolant expansion tank support bracket.

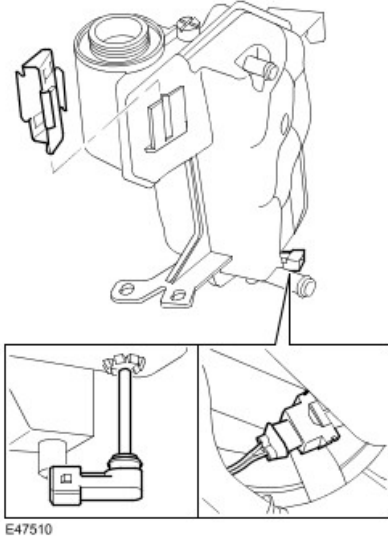

## Installation

- 1 . Install the bracket.
- 2 . Install the coolant low level sensor.
- 3 . Install the coolant expansion tank.
  - ▶ Connect the low level sensor electrical connector.
- 4 . Connect the coolant hoses to the expansion tank.
  - ▶ Secure with the clips.
  - ▶ Remove the hose clamps.
- 5 . Secure the power steering fluid reservoir.
  - ▶ Attach to the mounting bracket.
- 6 . Position the front differential breather line.
- 7 . Secure the power steering fluid cooler line.
  - ▶ Secure in the clips.
- 8 . Secure the coolant expansion tank.
  - ▶ Tighten the bolts to 10 Nm (7 lb.ft).
- 9 . Secure the windshield washer reservoir filler neck.
  - ▶ Locate in clip.
- 10 . Install the cooling fan lower shroud.
 

For additional information, refer to [Cooling Fan Shroud \(26.25.11\)](#)
- 11 . Top up the coolant.
- 12 . Connect the battery ground cable.
 

For additional information, refer to [Specifications](#)