
DPF System Components

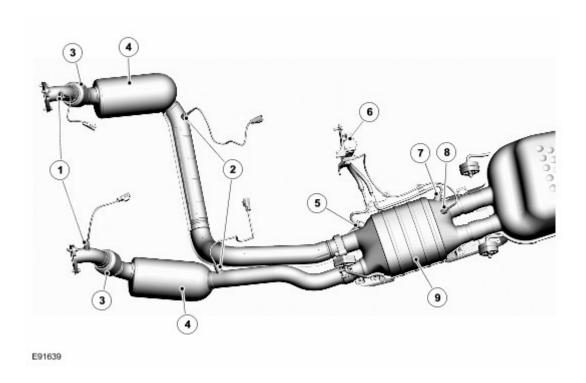

Item	Part Number	Description
1		Exhaust gas temperature sensor (pre catalyst)
2		Exhaust gas temperature sensor (post catalyst)
3		Flexible decoupler
4		Catalytic converter
5		High pressure sensor pipe
6		Differential pressure sensor
7		Low pressure sensor pipe
8		Exhaust gas temperature sensor (Post DPF)
9		Diesel particulate filter