


2. Remove the transmission undershield.


\* Remove the 6 bolts.

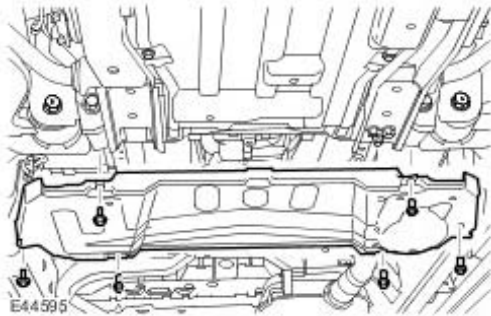

3.  **WARNING: Observe due care when working near a hot exhaust system.**

Remove the fuel filter heat shield.

\* Remove the 3 bolts.

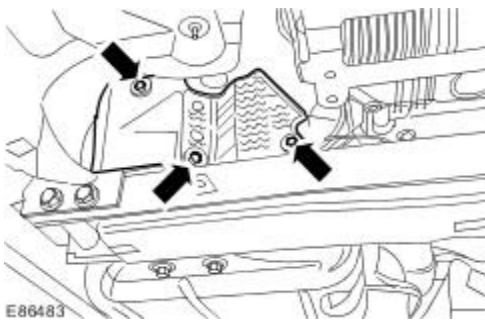

4. Drain the fuel filter element.

\* Position a container to collect the fluid spillage.

\* Loosen the nut.

\* Attach a suitable drain tube to the water-in-fuel sensor drain port.

\* Remove the drain tube.

\* Tighten the nut.

