



Engine Coolant Level Switch

Removal

1. Release the power steering fluid reservoir from the bracket.

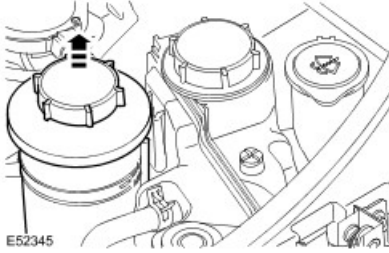


2. Release the windshield washer reservoir filler neck.

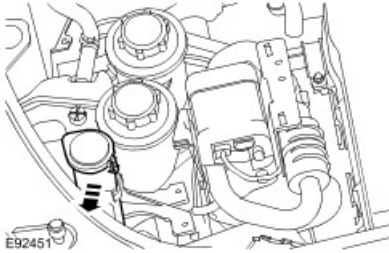


3. Reposition the coolant expansion tank.

▶ Remove the 2 bolts.

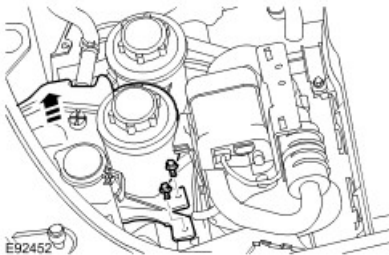

4. Remove the engine coolant level switch.

▶ Disconnect the engine coolant level switch electrical connector.

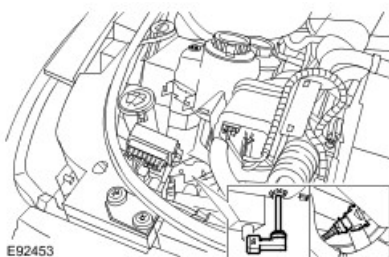

Installation

1. **NOTE:**

An audible click can be heard when the engine coolant level switch is correctly installed.

Install the engine coolant level switch.

▶ Connect the engine coolant level switch electrical connector.

- 2.



CAUTION: Make sure that the component is correctly located on the locating pegs.

Secure the coolant expansion tank.

▶ Tighten the bolts to 10 Nm (7 lb.ft).

3. Secure the windshield washer reservoir filler neck.

4. Secure the power steering fluid reservoir to the bracket.