

Floor Console Removal

- 1 . Disconnect the battery ground cable.

For additional information, refer to [Specifications](#)

- 2 . Remove the floor console upper panel.

For additional information, refer to [Floor Console Upper Panel \(76.25.11\)](#)


- 3 . Release the transmission selector lever.

Remove the 4 bolts.

Disconnect the electrical connector.


- 4 . Release the selector cable.

Remove the clip.

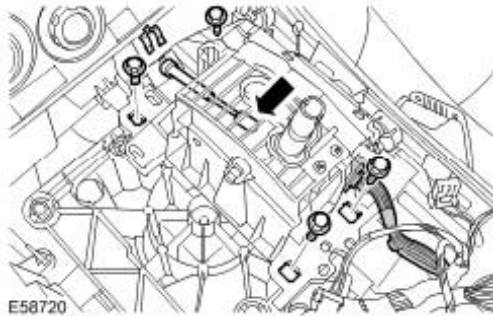

- 5 . Remove the transmission selector lever mount bracket.

Remove the 4 bolts.

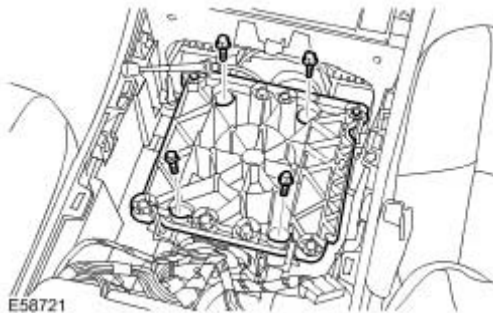


- 6 . Remove the driver side closing trim panel.

Remove the 2 screws.


Release the clip.

Disconnect the electrical connector. Release the clip.

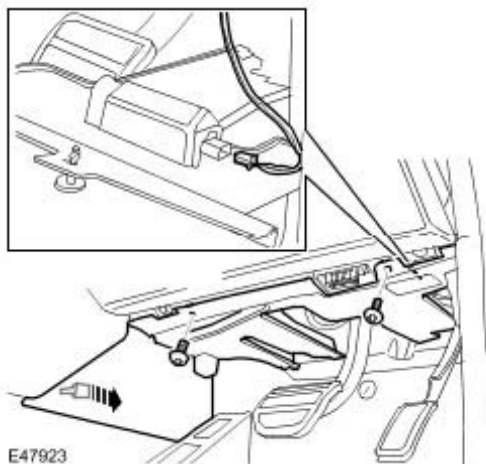

Remove the 2 screws.

Disconnect the electrical connector.

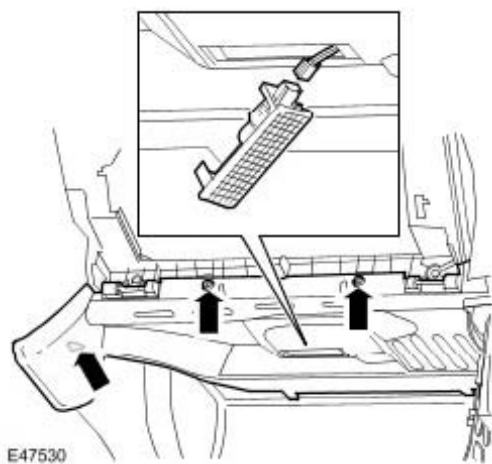

- 8 . Remove the floor console.
Manoeuvre the front seats to allow access.

Disconnect the 2 electrical connectors.
Remove the screw covers.

Remove the 2 screws.

