

## Floor Console Upper Panel (76.25.11)

### Removal

- 1 . Disconnect the battery ground cable.


For additional information, refer to [Specifications](#)

- 2 . Remove the ride and handling optimization switch.

For additional information, refer to [Ride and Handling Optimization Switch \(86.65.11\)](#)

- 3 . Remove the audio unit side trim panels.

Release the 6 clips.

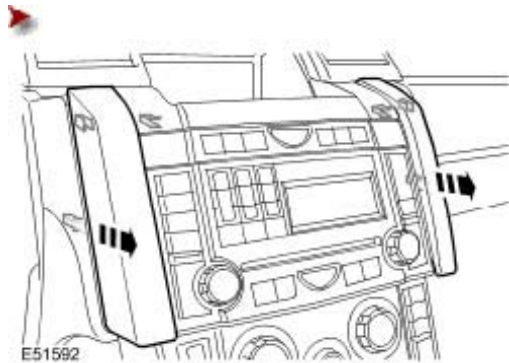

- 4 . Remove the floor console upper panel.

\*Open the cubby box lid.

\*Remove the 3 screws.

\*Release the 6 clips.

\*Release and disconnect the electrical connector.

