Front Seat Backrest Cover (78.90.08)

Removal

- 1 . Make the SRS system safe. For additional information, refer to <u>Standard Workshop Practices</u>
- 2 . Remove the front safety belt buckle. For additional information, refer to <u>Front Safety Belt Buckle (76.73.30)</u>
- 3. Remove the front seat cushion side trim.

Remove the 2 screws.





4 . Remove the seat backrest hinge cover.



5. Remove the front seat backrest assembly.

Release the retaining clips and disconnect the three electrical connectors.

Remove the 4 Torx bolts.



6. Remove the front seat head restraint.

Release the front seat head restraint latch.



7 . Remove the front seat armrest.

Remove the bolt cover.

Remove the Torx bolt.



8 . Remove the front seat lumbar adjustment knob.

Pull sharply to release from lumbar mechanism.



9. Release the front seat backrest cover.



10 . Remove the front seat backrest cover. Remove the 3 hog rings.



Installation

- 1 . Install the front sear backrest cover.
 - Install the hog rings.
 - Install the clips.
 - Attach the tension straps.
- 2 . Install the front seat lumbar adjustment knob.
 - Push firmly to secure to the lumbar mechanism.
- 3 . Install the front seat armrest.
 - Tighten the Torx bolt to 10 Nm (7 lb.ft).
 - Install the bolt cover.
- 4 . Install the front seat head restraint.
- 5 . Install the front seat backrest assembly.
 - Tighten the Torx bolts to 25 Nm (18 lb.ft).
 - Connect and secure the electrical connectors.
- 6 . Install the seat backrest hinge cover.
 - Tighten the screws.
 - Fit the clip.
- 7 . Install the front seat cushion side trim.
 - Position and secure in the clips.
 - Install the screws.
- 8 . Install the front safety belt buckle. For additional information, refer to <u>Front Safety Belt Buckle (76.73.30)</u>