

Front Wiper Pivot Arm (84.15.02)

Removal

1 . Noting the fitted position, remove the front wiper pivot arm.

▶ Remove the nut cover.


▶ Remove the nut.

2 . **NOTE:**

Do not disassemble further if the component is removed for access only.

Remove the wiper blade.

▶ Release the clip.

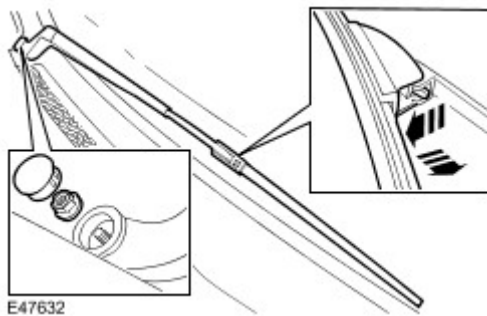

Installation

1 . To install, reverse the removal procedure.

▶ Tighten the nut to 18 Nm (13 lb.ft).