

Published: Jun 28, 2004

Glove Compartment

(76.52.03) Special Service

Tools




Glove compartment hinge pin remover 501-113

Removal


- 1 . Remove the cowl side trim panel.
- 2 . Remove the closing trim panel.


- * Release the clip.
- * Remove the 2 screws.
- * Disconnect the electrical connector.

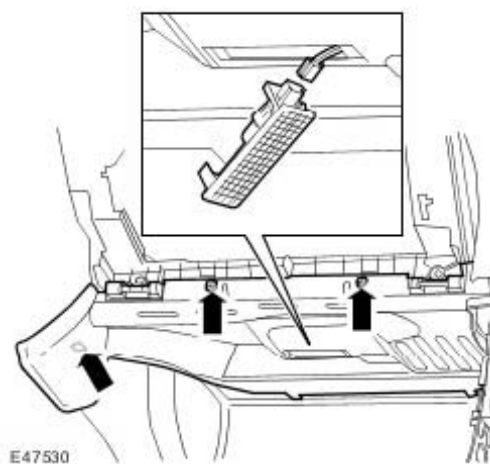

3. Open the glove compartment to the service condition.

* Release the glove compartment latch stops.

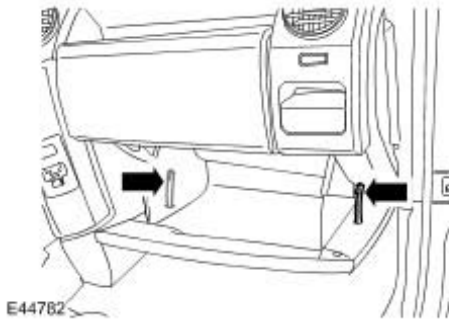

4.  **CAUTION:** If the hinge pin will not release, rotate the pin through 90 degrees to aid removal.

* Using the special tool, remove the glove compartment.

* Apply pressure to the head of the hinge pin and install the special tool. Remove the hinge pin.

* Repeat the above procedure for the remaining hinge pin.

