


# Quick Start

## HEADLAMP TOURING ADJUSTMENT

Position of the lever illustrated will vary depending on type of headlamps and side of vehicle. It may be on either side of the headlamp bulb aperture.

When touring in a country where traffic drives on the opposite side of the road to where you normally drive, use the tourist lever mechanism within each headlamp unit, to alter the beam pattern. This enables the vehicle to be driven, without having to stick blanking decals onto the headlamp lens.

### Xenon headlamps

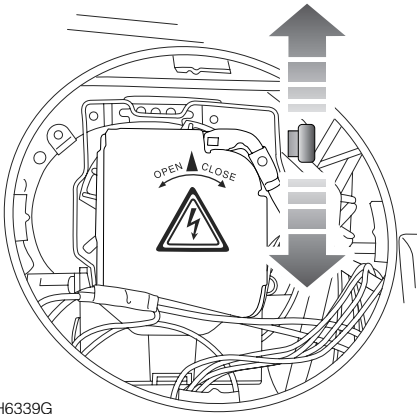


H6339G

Follow the process shown in **HEADLAMP UNIT, 270** to gain access to the inside of the headlamp unit. Move the lever to adjust the beam.

### Lever default position - Xenon headlamps

Right hand headlamp	Up
Left hand headlamp	Up

### Halogen headlamps

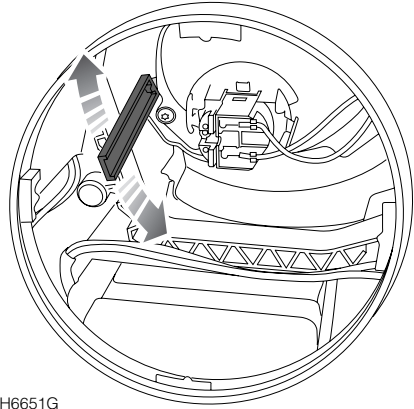

H6651G

Follow the process shown in **HEADLAMP UNIT, 270** to gain access to the inside of the headlamp unit. Move the lever to adjust the beam.

### Lever default position - Halogen headlamps

Right hand headlamp	Down
Left hand headlamp	Up