


Liftgate Moulding

Removal




CAUTION: Always protect paintwork and glass when removing exterior components.

- 1 . Remove the liftgate lower trim panel.
Release the 15 clips.
- 2 . **NOTE:** Do not disassemble further if the component is removed for access only.

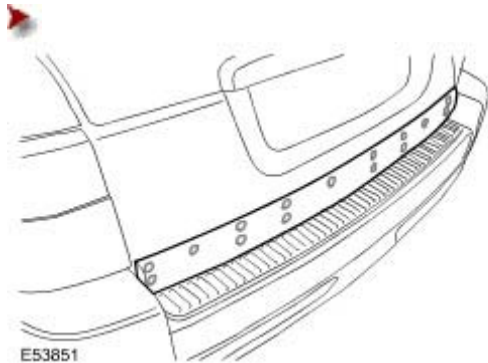

Remove the 15 clips.

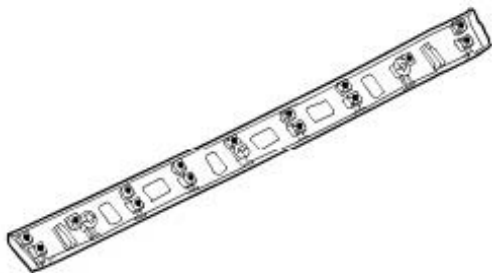

Installation

- 1 . Install the clips.
- 2 . Install the liftgate lower trim panel.



Position and secure the clips.