Rear Bumper Cover (76.22.74)

Removal

All vehicles

- 1 . Disconnect the battery ground cable. For additional information, refer to <u>Specifications</u>
- 2 . Remove both rear lamp assemblies. For additional information, refer to <u>Rear Lamp Assembly (86.40.70)</u>
- 3. Remove the rear bumper towing eye cover.

Release the 2 clips.



4 . Release the liftgate seal.



Vehicles with parking aid

5 . Disconnect the parking aid sensor wiring harness electrical connector



All vehicles

- 6 . Remove the bumper scuff plate.
 - Carefully release the 10 clips.



7 . Remove the bumper cover lower fixings. Remove the 6 screws.



8 . Remove the bumper cover upper fixings.



Remove the 2 screws.



9. With assistance, remove the rear bumper cover.
Carefully release the 10 clips.



10 . **NOTE:**

Do not disassemble further if the component is removed for access only.

Release the parking aid sensor wiring harness.

Release and disconnect the 4 electrical connectors.





Vehicles with parking aid

- 11 . Remove the parking aid sensor.
 - Release the 2 clips.
 - Repeat the above procedure for the remaining 3 sensors.



E45116

- 12 . Remove the parking aid sensor trim panel.
 - Release the 3 clips.
 - Repeat the above procedure for the remaining 3 sensor trim panels.



- 13 . Remove the LH harness support trim panel.
 - Release the 4 clips.
 - Repeat the above procedure for the other side.



14. Remove the 6 clips.



Installation

All vehicles

- 1. Install the clips.
- 2 . Install the harness support trim panels.

Secure the clips.

Vehicles with parking aid

- 3 . Install the parking aid sensor trim panels.
- 4 . Install the parking aid sensors.
- 5. Install the parking aid sensor wiring harness.



All vehicles

- 6 . Install the rear bumper cover.
 - Secure in the clips.

Install the screws.

- 7 . Install the bumper scuff plate.
 - Secure the clips.

Vehicles with parking aid

8 . Connect the parking aid sensor wiring harness electrical connector.

All vehicles

- 9 . Install the liftgate seal.
- 10 . Install the towing eye cover.

Secure the clips.

- 11 . Install both of the rear lamp assemblies. For additional information, refer to <u>Rear Lamp Assembly (86.40.70)</u>
- 12 . Connect the battery ground cable. For additional information, refer to <u>Specifications</u>