


Navigation System Antenna


- 1 . Remove the rear headliner trim panel.
Release the 7 clips.
Disconnect the interior light electrical connector.



- 2 . If installed remove the LH third row seat passenger assist handle.
Carefully release the screw covers.
Remove the 2 screws.
- 3 . If installed, remove the RH third row seat passenger assist handle.
Carefully release the screw covers.
Remove the 2 screws.

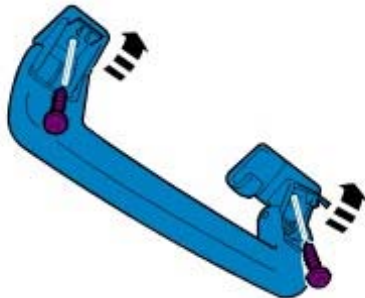

Release the 2 clips.

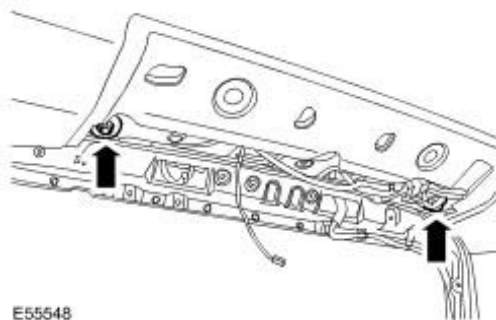

You will be able to see the two nuts holding the antenna if its there.

