


Pollen Filter (80.15.42)

Removal

- 1 . Open the glove compartment to the service condition.
Release the glove compartment latch stops.
- 2 . Remove the pollen filter housing cover.
- 3 . Remove the pollen filter.

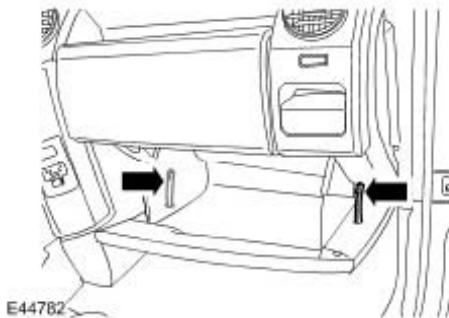

Installation

- 1 . To install, reverse the removal procedure.



Clean the component mating faces.