


## Rain Sensor (84.12.11)

### Removal

- 1 . Remove the interior mirror.  
For additional information, refer to [Interior Mirror \(76.10.51\)](#).
- 2 . Remove the rain sensor.
  - Release the 2 clips.
  - Disconnect the electrical connector.

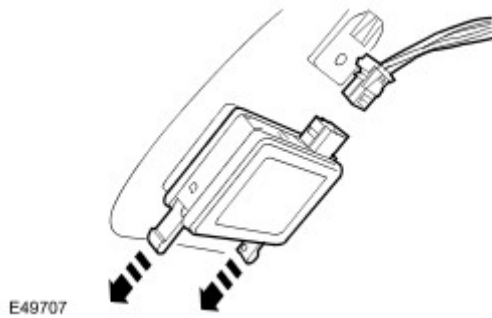

### Installation

- 1 . To install, reverse the removal procedure.
  - Configure a new sensor using T4.