


Rear Lamp Assembly (86.40.70)

Removal

- 1 . Open the liftgate.
- 2 . Release the rear lamp assembly.
 - Remove the 2 screws.
 - Release the 2 clips.
- 3 . Remove the rear lamp assembly.
 - Disconnect the electrical connector.

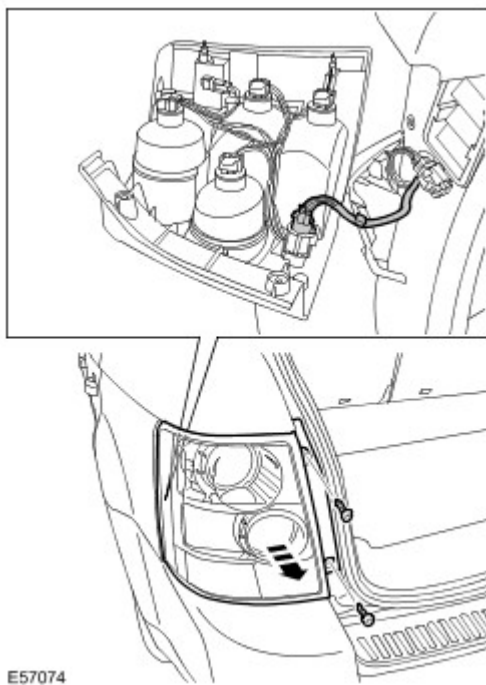


- 4 . **NOTE:**
Do not disassemble further if the component is removed for access only.

NOTE:
Note the fitted position.

Remove the wiring harness.

- Release the 5 bulb holders.
- Release the electrical connector.

- 5 . Remove the 5 bulbs.

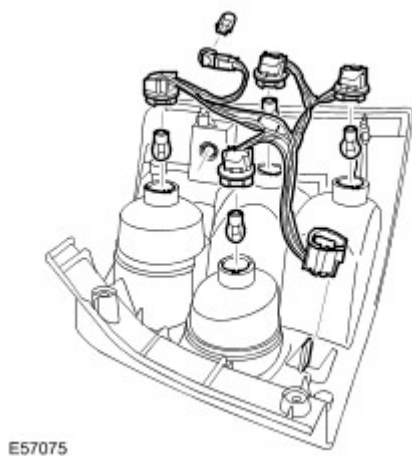

Installation

- 1 . Install the bulbs.
- 2 . Install the wiring harness.
 - Install the bulb holders.
 - Install the electrical connector.
- 3 . Install the rear lamp assembly.
 - Connect and secure the electrical connector.
 - Secure the clips.
 - Tighten the screws.
- 4 . Close the liftgate.