


## Rear Quarter Trim Panel (76.13.12)


### Removal

- 1 . If installed, remove the loadspace lamp unit.
  - ▶ Carefully release the lamp.
  - ▶ Disconnect the electrical connector.

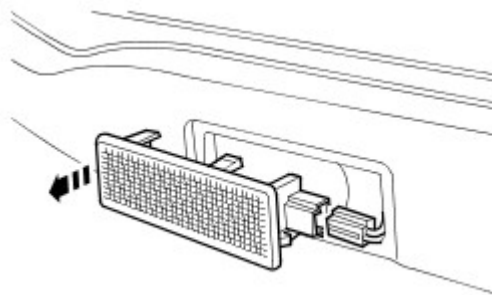


E52935

- 2 . Release the liftgate seal.

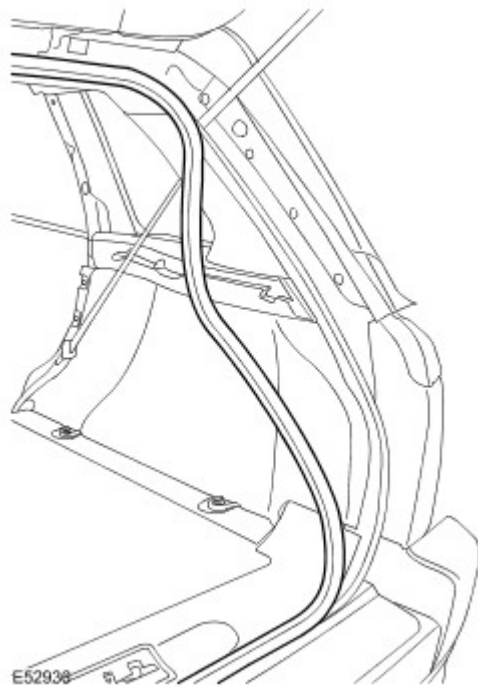

E52936

- 3 . Fold the seat assembly forwards.
- 4 . Remove the door frame seal.

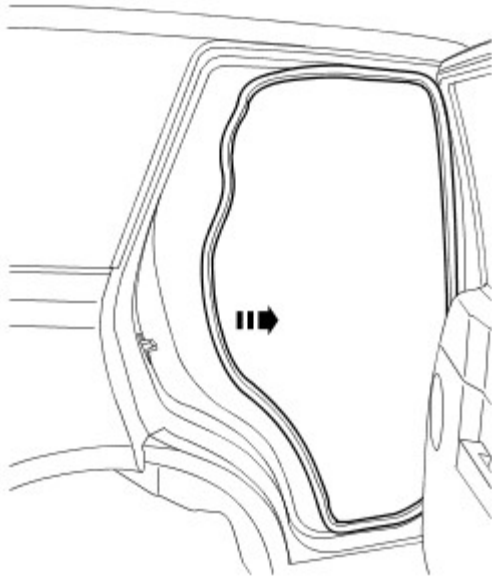


E52929

**5 . NOTE:**

Note the fitted position.

Remove the lower quarter trim panel.

- ▶ Remove the access cover.
- ▶ Release the 11 clips.

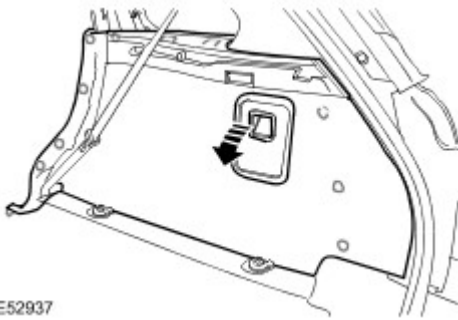


E52937

**6 . NOTE:**

Do not disassemble further if the component is removed for access only.

Remove the 8 clips.

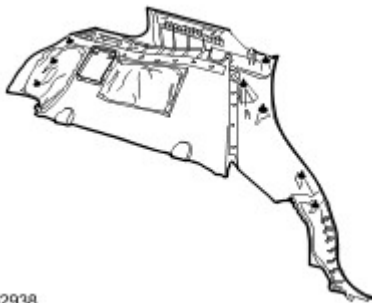


E52938

## Installation

1 . Install the clips.


2 . Install the load space lamp unit.


 Connect the electrical connector.

3 . **NOTE:**

Align to the position noted on removal.

Install the lower quarter trim panel

 Secure the clips.

 Install the access cover.

4 . Install the liftgate seal.

5 . Install the door seal.

6 . Fold seat assembly rearwards.