

Rear Wiper Pivot Arm (84.35.01)

Special Service Tools




General purpose puller
100-005A (LRT-99-500A)

Removal

1. Noting the fitted position and using the special tool, remove the rear wiper pivot arm.

- Remove the nut cover.
- Remove the nut.

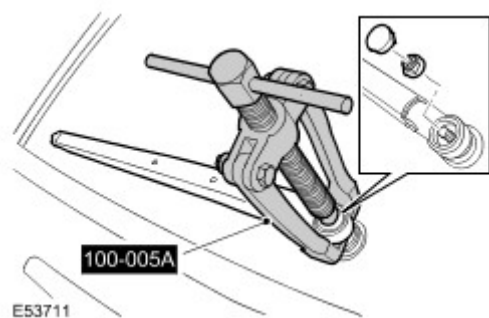


2. NOTE:

Do not disassemble further if the component is removed for access only.

Remove the wiper blade.

- Release the clip.

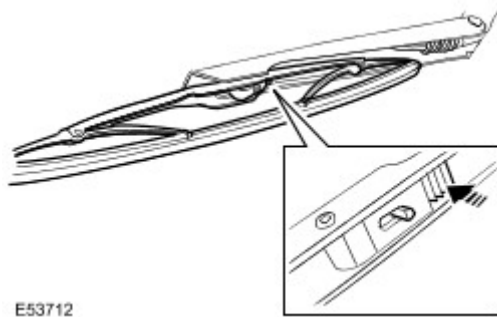

Installation

1. To install, reverse the removal procedure.

- Tighten the nut to 15 Nm (11 lb.ft).