


Steering Angle Sensor (57.40.02)


Removal

- 1 . Disconnect the battery ground cable.
For additional information, refer to [Specifications](#)
- 2 . Remove the driver side closing trim panel.

- Release the clip.
- Remove the 2 screws.
- Disconnect the electrical connector.

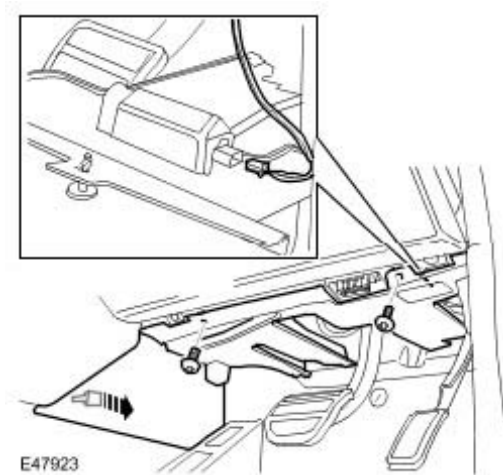

- 3 . Disconnect the steering angle sensor electrical connector.

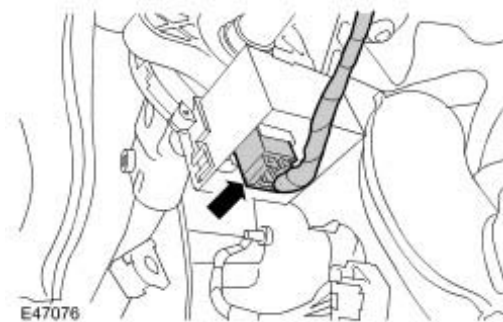

- 4 . Disconnect the steering column intermediate shaft from the steering column.


* Note the fitted position.

* Remove the special bolt and discard the nut.



5. Remove the steering angle sensor

Remove the 3 Torx screws

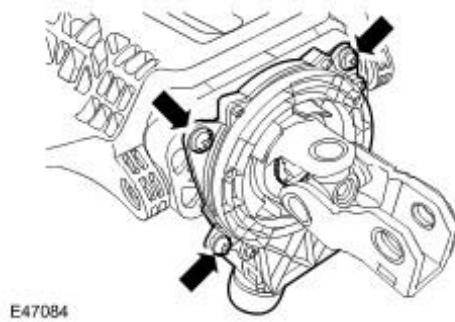

Installation

- 1 . Install the steering angle sensor.
Tighten the Torx screws to 3 Nm (2 lb.ft).
- 2 . Connect the steering column intermediate shaft.
Install the special bolt and tighten the new nut to 22 Nm (16 lb.ft).
- 3 . Connect the steering angle sensor electrical connector.
- 4 . Install the closing trim panel.
Connect the electrical connector.
Secure the clip.
Tighten the screws.
- 5 . Connect the battery ground cable. For additional information, refer to [Specifications](#).
- 6 . Initiate a new steering angle sensor using T4.