

Published: Mar 3, 2005



## Subwoofer Speaker

### (86.50.92) Removal

1. Disconnect the battery ground cable.
2. Remove the liftgate lower trim panel.
3. Remove the subwoofer.

\*Remove the 6 screws.

\*Disconnect the 2 electrical connectors.

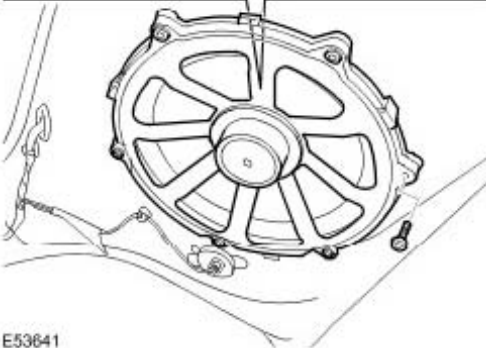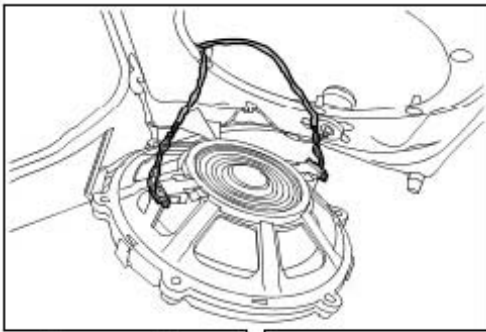

E53641