


Generator (86.10.02)

Removal


- 1 . Disconnect the battery ground cable.
For additional information, refer to [Specifications](#)
- 2 . Remove the cooling fan shroud.
For additional information, refer to [Cooling Fan Shroud \(26.25.11\)](#)
- 3 . Release the accessory drive belt.

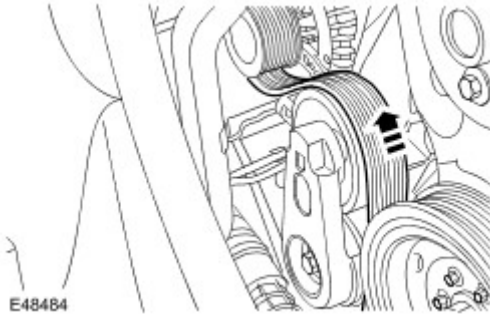

- 4 . Disconnect the generator harness.
 - ▶ Reposition the rubber insulator.
 - ▶ Remove the retaining nut.




- 5 . Remove the three generator retaining bolts.

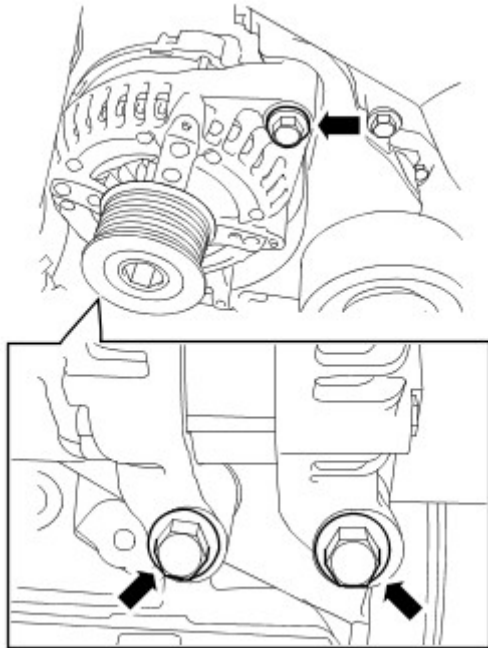

E53874

6 . Remove the generator.

- ▶ Reposition the generator.
- ▶ Disconnect the electrical connector.

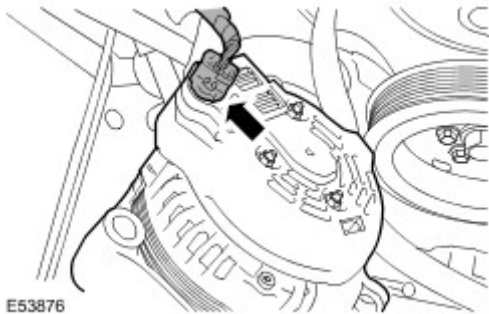

E53876

Installation

1 . Install the generator.


- ▶ Connect the electrical connector.
- ▶ Reposition the generator.

2 . **NOTE:**

Tighten the retaining bolts in the sequence shown.

Install the three generator retaining bolts.

- ▶ Tighten to 47 Nm (35 lb.ft).

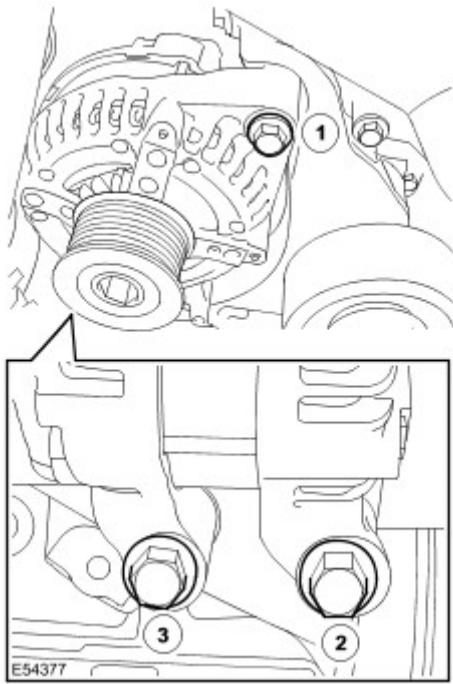

3 . Connect the generator harness.

- ▶ Tighten the retaining nut to 12 Nm (9 lb.ft).
- ▶ Reposition the rubber insulator.

4 . Attach the accessory drive belt.

5 . Install the cooling fan shroud.

For additional information, refer to [Cooling Fan Shroud \(26.25.11\)](#)

6 . Connect the battery ground cable.

For additional information, refer to [Specifications](#)