

Accessory Drive - TDV8 3.6L Diesel - Accessory Drive Belt

Removal and Installation

Removal


1. Disconnect the battery ground cable.

For additional information, refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. Raise and support the vehicle.

3. Remove the viscous coupling.

For additional information, refer to: [Cooling Fan](#) (303-03E Engine Cooling - TDV8 3.6L Diesel, Removal and Installation).

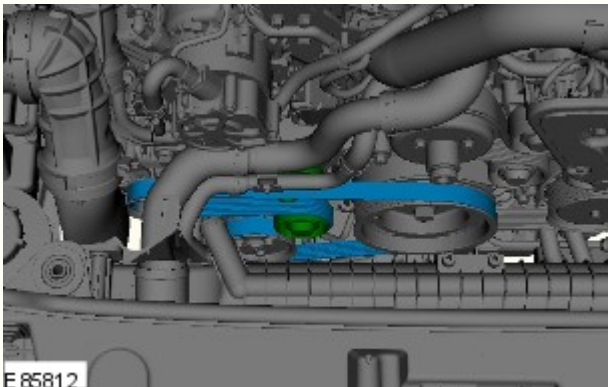

4. Remove the accessory drive belt.
 - Release the tension from the belt.

Installation

1. To install, reverse the removal procedure.
 - Clean and inspect the drive pulleys for damage.