



E52480

Item	Part Number	Description
1		Initiator
2		Tire pressure sensor
3		Instrument cluster
4		TPMS module
5		TPMS switch (Not available on NAS vehicles)

The purpose of the Tire Pressure Monitoring System (TPMS) is to assist the driver in maintaining the vehicle's tire pressures at the optimum level in order to:

- improve fuel consumption
- maintain ride and handling characteristics