


Windshield Washer Reservoir (84.10.03)

Removal


- 1 . Remove the front bumper cover.
For additional information, refer to [Front Bumper Cover \(76.22.72\)](#).
- 2 . Remove the windshield washer reservoir filler neck.
 - ▶ Release the windshield washer reservoir filler neck from the coolant expansion tank.
 - ▶ Remove and if necessary, discard the seal.

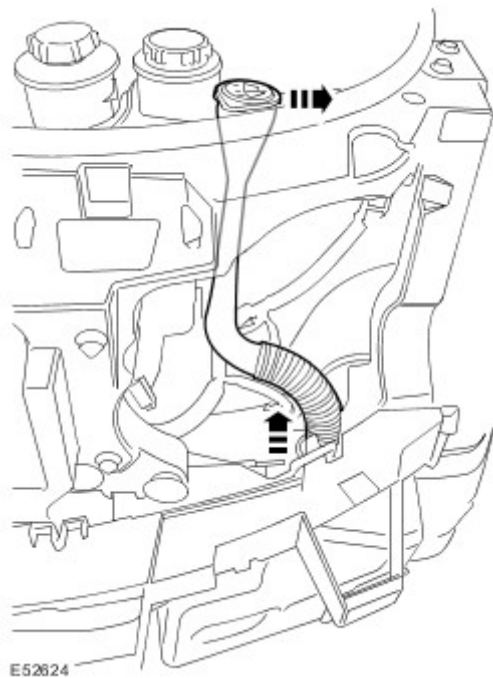


- 3 . **NOTE:**
Some fluid spillage is inevitable during this operation.

Disconnect the 2 hoses from the windshield washer reservoir pumps.

- ▶ Drain the washer reservoir fluid.
- ▶ Disconnect the 3 electrical connectors.

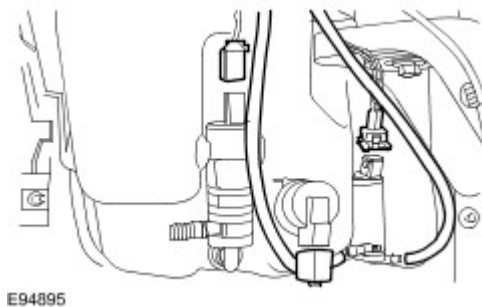

- 4 . Remove the windshield washer reservoir.
 - ▶ Remove the 4 bolts.

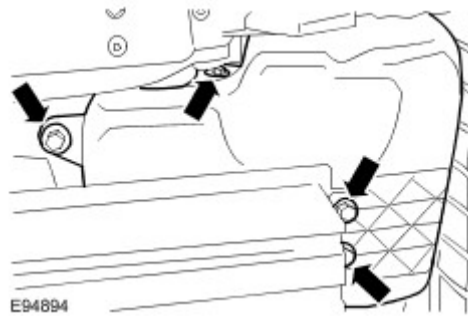

5 . NOTE:


Do not disassemble further if the component is removed for access only.

Remove the windshield washer pump.

- ▶ Remove and if necessary, discard the seal.

6 . Remove the headlamp washer pump.

- ▶ Remove and if necessary, discard the seal.

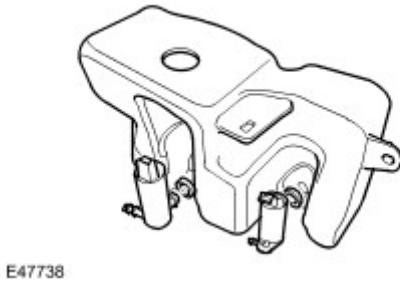

Installation

1 . Install the windshield washer pump.

- ▶ If necessary, install a new seal.

2 . Install the headlamp washer pump.

- ▶ If necessary, install a new seal.

3 . Install the windshield washer reservoir.

- ▶ Tighten the M6 bolts to 6 Nm (4 lb.ft).
- ▶ Tighten the M8 bolt to 25 Nm (18 lb.ft).

4 . Connect the 2 hoses to the windshield washer reservoir pumps.

- ▶ Connect the electrical connectors.

5 . Install the windshield washer reservoir filler neck.

- ▶ If necessary, install a new seal.
- ▶ Lubricate the seal.
- ▶ Secure in the clip.

6 . Install the front bumper cover.

For additional information, refer to [Front Bumper Cover \(76.22.72\)](#)

