



Rear Stabilizer Bar Bushing


Removal

- 1 .  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**

Raise and support the vehicle.

- 2 . Remove the rear bumper cover.
For additional information, refer to [Rear Bumper Cover \(76.22.74\)](#)
- 3 . Remove the spare wheel and tire.
- 4 . Raise the vehicle.
- 5 . Remove the rear wheels and tires.
- 6 . Remove the body mount retaining bolts.


 Remove the 8 bolts.

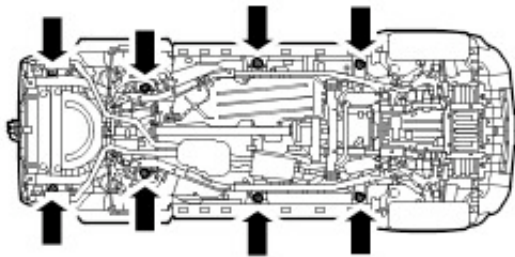


E52217

- 7 .  **CAUTION: Only raise the body sufficiently to remove the body mounts.**


Raise the body.

 Using suitable stands, raise the body to release the body mounts.

- 8 . Remove the 2 rear body mounts.

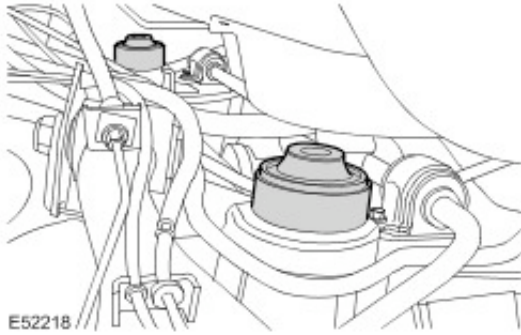

- 9 . Remove the stabilizer bar bushings.
 - ▶ Remove the 4 bolts.
 - ▶ Remove the 2 clamps.

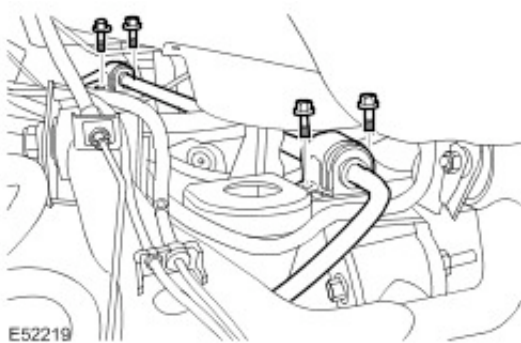

Installation

- 1 . Install the stabilizer bar bushings.
- 2 . Install the stabilizer bar clamps.
 - ▶ Tighten the 4 retaining bolts to 62 Nm (46 lb.ft).
- 3 . Install the body mounts.
- 4 . Lower the body.
 - ▶ Remove the stands.
- 5 . Install the body mount retaining bolts.
 - ▶ Tighten the 8 retaining bolts to 133 Nm (98 lb.ft).
- 6 . Install the wheels and tires.
- 7 . Lower the vehicle.
- 8 . Install the spare wheel and tire.
- 9 . Install the rear bumper cover.
For additional information, refer to [Rear Bumper Cover \(76.22.74\)](#)