

Rear Spoiler


Removal




CAUTION: Always protect paintwork and glass when removing exterior components.

- 1 . Disconnect the battery ground cable.
For additional information, refer to [Specifications](#)


- 2 . Open the liftgate glass.


 Remove the 2 Torx bolts.


 Close the liftgate glass.




- 3 . Open the liftgate.


 Remove the 3 nuts.


 Close the liftgate.

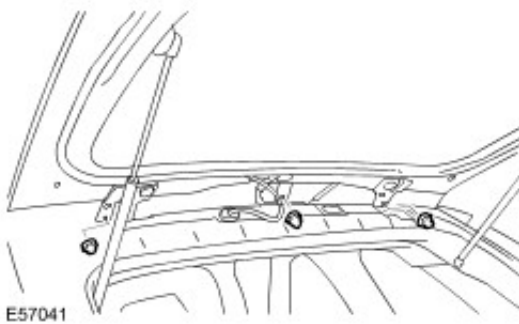

- 4 . Remove the rear spoiler.

 Disconnect the electrical connector.


 Disconnect the washer jet hose.

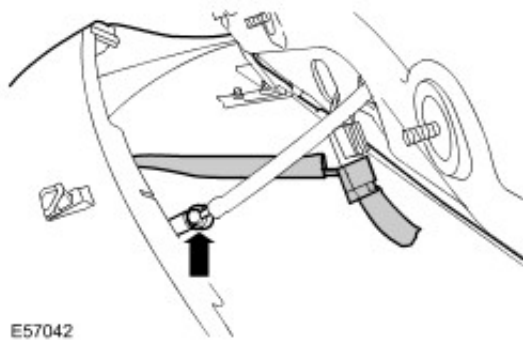

5 . **NOTE:**

Do not disassemble further if the component is removed for access only.


Remove the CHMSL .


 Remove the 4 Torx screws.



6 . Remove the 2 clips.


7 . Remove the washer jet.

 Release the clip.

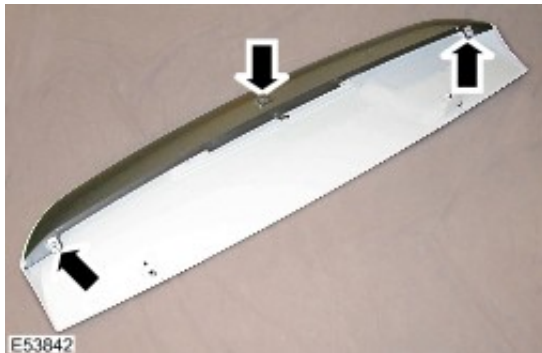

Installation





1 . Install the high mounted stoplamp.

 Install the Torx screws.

2 . Install the washer jet.

3 . Install the 2 clips.

4 . Install the spoiler.

-  Connect and secure the electrical connector.
-  Connect the washer jet hose.
-  Tighten the nuts to 10 Nm (7 lb.ft).
-  Tighten the Torx bolts to 25 Nm (18 lb.ft).

5 . Connect the battery ground cable.

For additional information, refer to [Specifications](#)