


Vehicle Dynamic Suspension - Air Suspension Air Filter

Removal and Installation

Removal


1. Open the liftgate and tailgate.
2. Remove the spare wheel and tire.
3. Remove the 4 nuts securing the LH rear tail pipe heat shield.

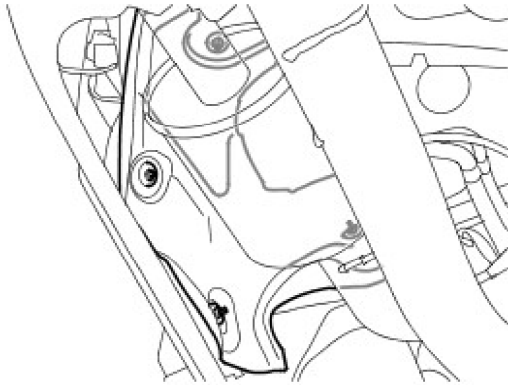

E53885

4. Reposition the LH rear tail pipe heat shield.
5. Disconnect the air suspension intake filter line.
6. Detach the air suspension intake filter.


- Release the grommet.
- Release from the clip.

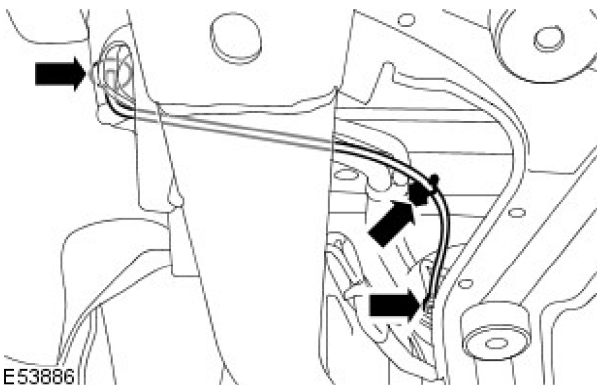

E53886

7. Remove the LH lower rear quarter trim panel.
For additional information, refer to: [Rear Quarter Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

8. Remove the air suspension intake filter.

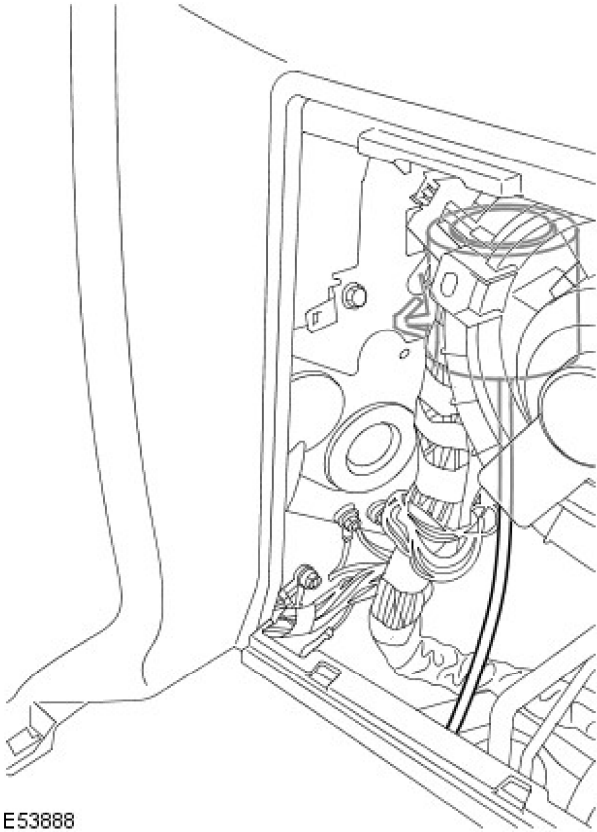

E53888

Installation

1. NOTE: Make sure the air suspension air filter retaining clip is fully seated in the vehicle body. An audible click will be heard when the retaining clip is fully seated.

Install the air suspension intake filter.

- Install the grommet.

2. Install the LH rear quarter trim panel.

For additional information, refer to: [Rear Quarter Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Attach the air suspension intake filter.

4. Connect the air suspension intake filter line.

5. Reposition the LH rear tail pipe heat shield.

- Install the nuts.

6. Install the spare wheel and tire.

7. Close the liftgate and tailgate.