






Floor Console (76.25.01)

Removal

1. Remove the floor console upper trim panel. For additional information, refer to [Floor Console Upper Panel \(76.25.11\)](#) (Section 501-12)
2. Remove the cigar lighter assembly closing panel.
 - ▶ Release the 4 clips.

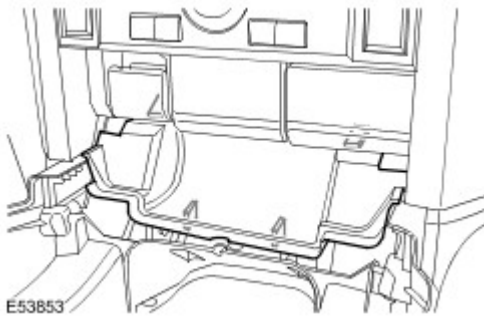


3. Release the floor console wiring harness and disconnect the 5 electrical connectors.
4. Remove the floor console.
 - ▶ Move the front seats fully forwards.
 - ▶ Remove both rear Torx bolt covers.
 - ▶ Remove the 4 Torx bolts.

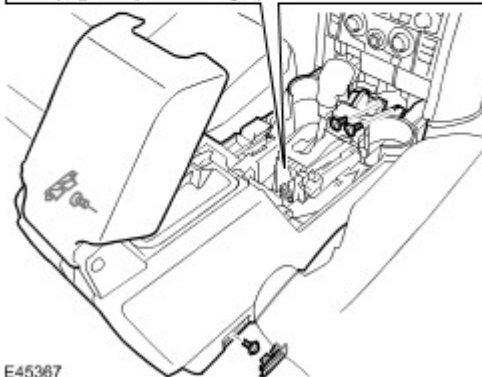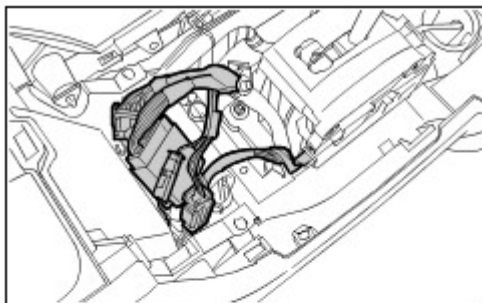


5. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the floor console lid.


- ▶ Open the lid.
- ▶ Remove the 2 Torx bolts.
- ▶ Remove the 2 covers.

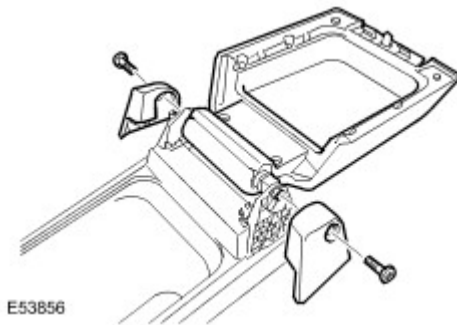

6. Remove the auxiliary socket panel.
- ▶ Release the 2 clips.
 - ▶ Disconnect the 2 electrical connectors.

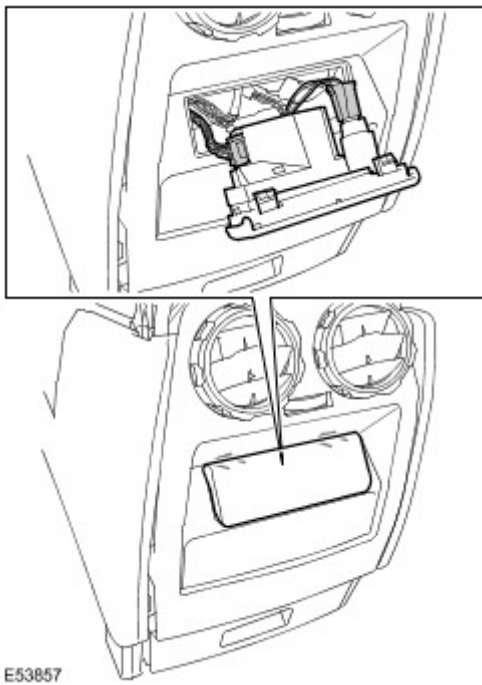


7. Remove the floor console register trim panel.
- ▶ Release the 6 clips.

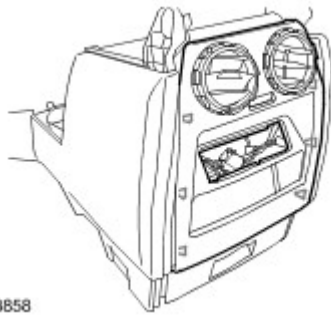

E53858

8. Remove the cup holder.
▶ Release the 2 clips.

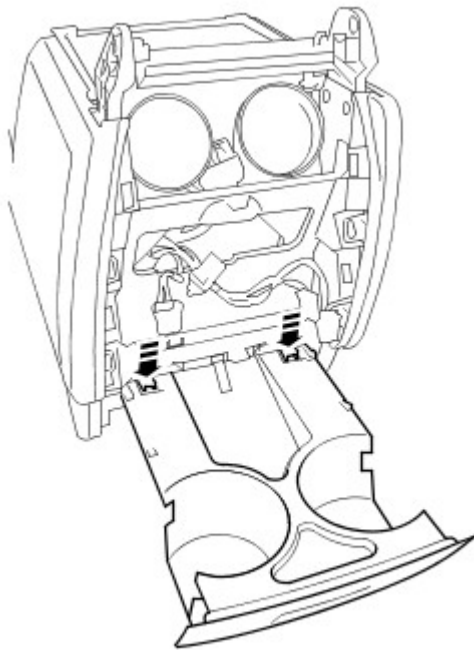


E53859

9. Remove the floor console storage compartment.
▶ Remove the 2 Torx screws.
▶ Release the 5 clips.



10. Remove the wiring harness.
 - ▶ Release the 3 clips.

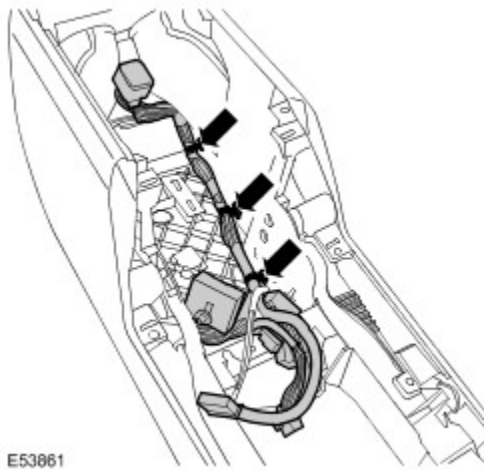

Installation

1. Install the wiring harness.
 - ▶ Secure the clips.
2. Install the floor console stowage compartment.
 - ▶ Secure the clips.
 - ▶ Tighten the Torx screws.
3. Install the cup holder.
 - ▶ Secure with the clips.
4. Install the floor console register trim panel.
 - ▶ Secure with the clips.
- 5.

Install the auxiliary socket panel.

- ▶ Connect the electrical connectors.
- ▶ Secure with the clips.

6 . Install the floor console lid.

- ▶ Install the covers.
- ▶ Tighten the Torx bolts to 3 Nm (2 lb.ft).

7 . Install the floor console.

- ▶ Tighten the Torx bolts to 10 Nm (7 lb.ft).
- ▶ Install the Torx bolt covers.
- ▶ Connect and secure the electrical connectors.

8 . Install the cigar lighter assembly closing panel.

- ▶ Secure with the clips.

9 . Install the floor console upper trim panel. For additional information, refer to [Floor Console Upper Panel \(76.25.11\)](#) (Section 501-12)