



## Yaw Rate Sensor (70.70.35)

### Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00 Charging System - General Information)
2. Remove the floor console. For additional information, refer to [Floor Console \(76.25.01\)](#) (Section 501-12 Instrument Panel and Console)


3.



**CAUTION: Make sure the wiring harness is protected when cutting the carpet.**

Remove the yaw rate sensor.

- ▶ Cut the carpet for access.
- ▶ Position the wiring harness aside.
- ▶ Disconnect the electrical connector.
- ▶ Remove the two retaining bolts.

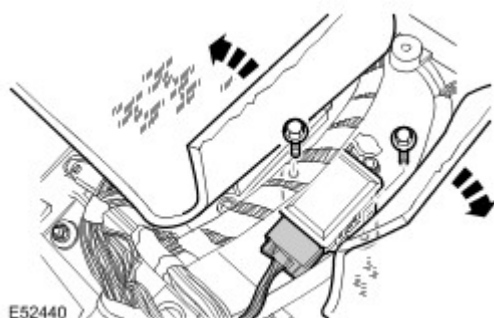

### Installation

1. Install the yaw rate sensor.
  - ▶ Tighten the bolts to 7 Nm (5 lb.ft).
  - ▶ Connect the electrical connector.
  - ▶ Attach the wiring harness.
  - ▶ Attach the carpet.
2. Install the floor console. For additional information, refer to [Floor Console \(76.25.01\)](#) (Section 501-12 Instrument Panel and Console)
3. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00 Charging System - General Information)
4. If a new yaw rate sensor has been installed, interrogate the ABS system using T4.