

Exterior Lighting - Adaptive Front Lighting Module

Removal and Installation

Removal

- **NOTE:** The position of the adaptive front lighting module will change with hand of drive.

1. Disconnect the battery ground cable.
For additional information, refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Passenger side: Remove the cowl side trim panel.
For additional information, refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Remove the CJB.
For additional information, refer to: [Central Junction Box \(CJB\)](#) (418-00 Module Communications Network, Removal and Installation).
4. Remove the adaptive front lighting module.
 - Disconnect the electrical connector.
 - Remove the bolt.



E55696

Installation

1. Install the adaptive front lighting module.
 - Tighten the bolt to 10 Nm (7 lb.ft).
 - Connect the electrical connector.
2. Install the CJB.
For additional information, refer to: [Central Junction Box \(CJB\)](#) (418-00 Module Communications Network, Removal and Installation).
3. Install the cowl side trim panel.
For additional information, refer to: [Cowl Side Trim Panel](#) (501-05