

COMPONENT LOCATION – 1 OF 3 – FRONT SECTION – VEHICLES WITH 2 ZONE AND 4 ZONE CLIMATE CONTROL SYSTEM

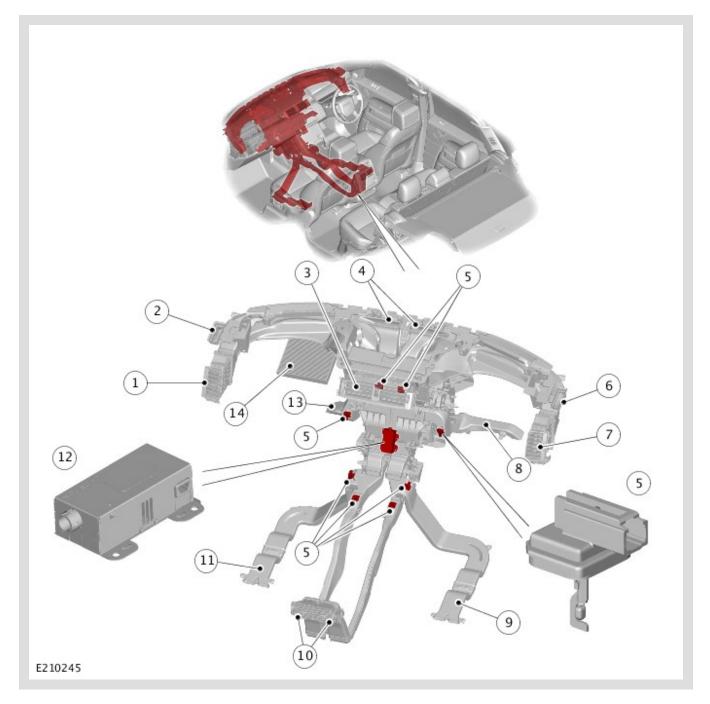

ITEM	DESCRIPTION
1	Vent - Instrument panel passenger side

ITEM	DESCRIPTION
2	Vent - Left side window
3	Vent - Instrument panel center
4	Vent - Windshield
5	Duct air temperature sensor (8 off)
6	Vent - Right side window
7	Vent - Instrument panel driver side
8	Driver footwell duct
9	Rear right footwell duct
10	Vent - Floor console - Rear
11	Rear left footwell duct
12	Air ionizer
13	Front passenger footwell duct
14	Air filter


COMPONENT LOCATION – 2 OF 3 – REAR SECTION – VEHICLES EQUIPPED WITH 4 ZONE CLIMATE CONTROL SYSTEM AND WITHOUT THIRD ROW SEATS

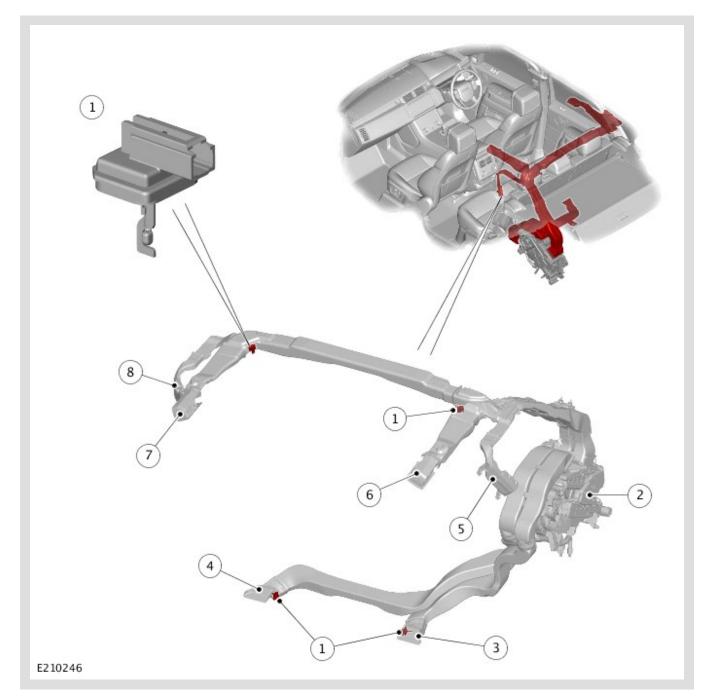

ITEM	DESCRIPTION
1	Duct air temperature sensors (4 off)
2	Blower - Auxiliary
3	Vent - Rear left passenger seat
4	Vent - Rear right passenger seat
5	Vent - Rear left 'C' pillar
6	Vent - Rear left passenger head

ITEM	DESCRIPTION
7	Vent - Rear right passenger head
8	Vent - Rear right 'C' pillar

COMPONENT LOCATION – 3 OF 3 – REAR SECTION – VEHICLES EQUIPPED WITH 4 ZONE CLIMATE CONTROL SYSTEM AND WITH THIRD ROW SEATS

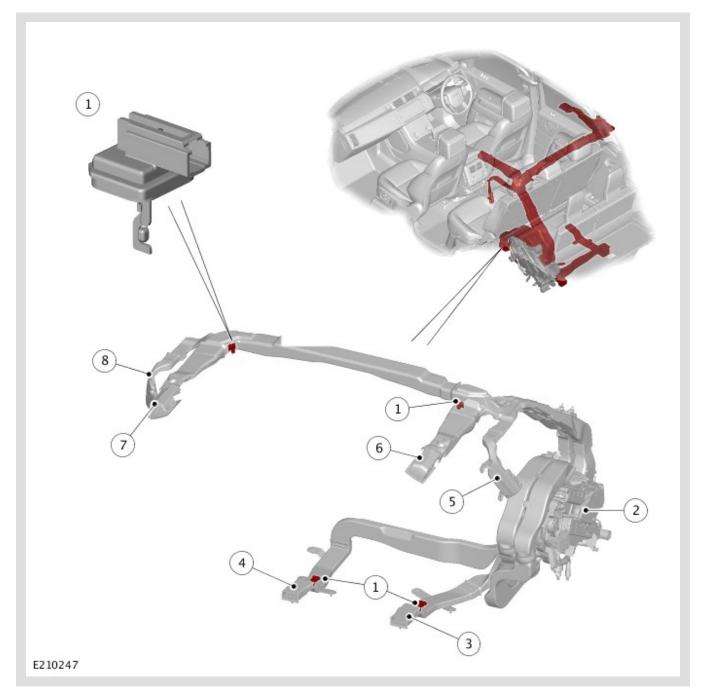

ITEM	DESCRIPTION
1	Duct air temperature sensors (4 off)
2	Blower - Auxiliary
3	Vent - Rear left passenger seat

ITEM	DESCRIPTION
4	Vent - Rear right passenger seat
5	Vent - Rear left 'C' pillar
6	Vent - Rear left passenger head
7	Vent - Rear right passenger head
8	Vent - Rear right 'C' pillar