


A-Pillar Trim Panel (76.13.26)

Removal


- 1 . Release the door weatherstrip to access the A-pillar upper trim panel and instrument panel end panel.



- 2 . Remove the instrument panel end panel.
 - ▶ Release the clip.

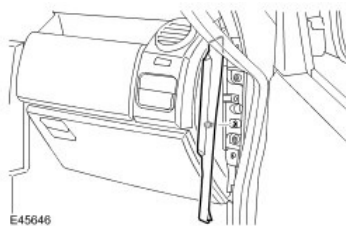


- 3 . Remove the A-pillar upper trim panel.
 - ▶ Release the screw cover.
 - ▶ Remove and discard the Torx screw.
 - ▶ Release the clip.

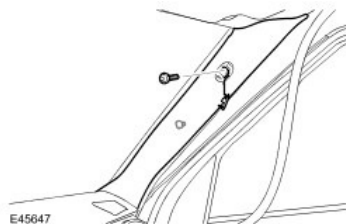

- 4 . **NOTE:**
Do not disassemble further if the component is removed for access only.

Remove the screw retainer and clip from the A-pillar upper trim panel.

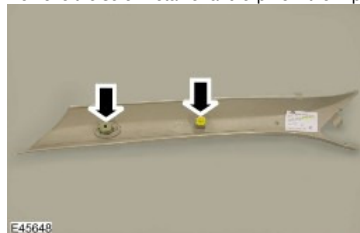

Installation

- 1 . Install the screw retainer and clip to the A-pillar upper trim panel.
- 2 . Install the A-pillar upper trim panel.
 - ▶ Secure with the clip.
 - ▶ Install a new Torx screw and tighten to 3 Nm (2 lb.ft).
 - ▶ Install the screw cover.
- 3 . Install the instrument panel end panel.
 - ▶ Secure with the clip.
- 4 . Attach the door weatherstrip.