


## CRANKCASE VENTILATION

### Crankcase Ventilation Component Location

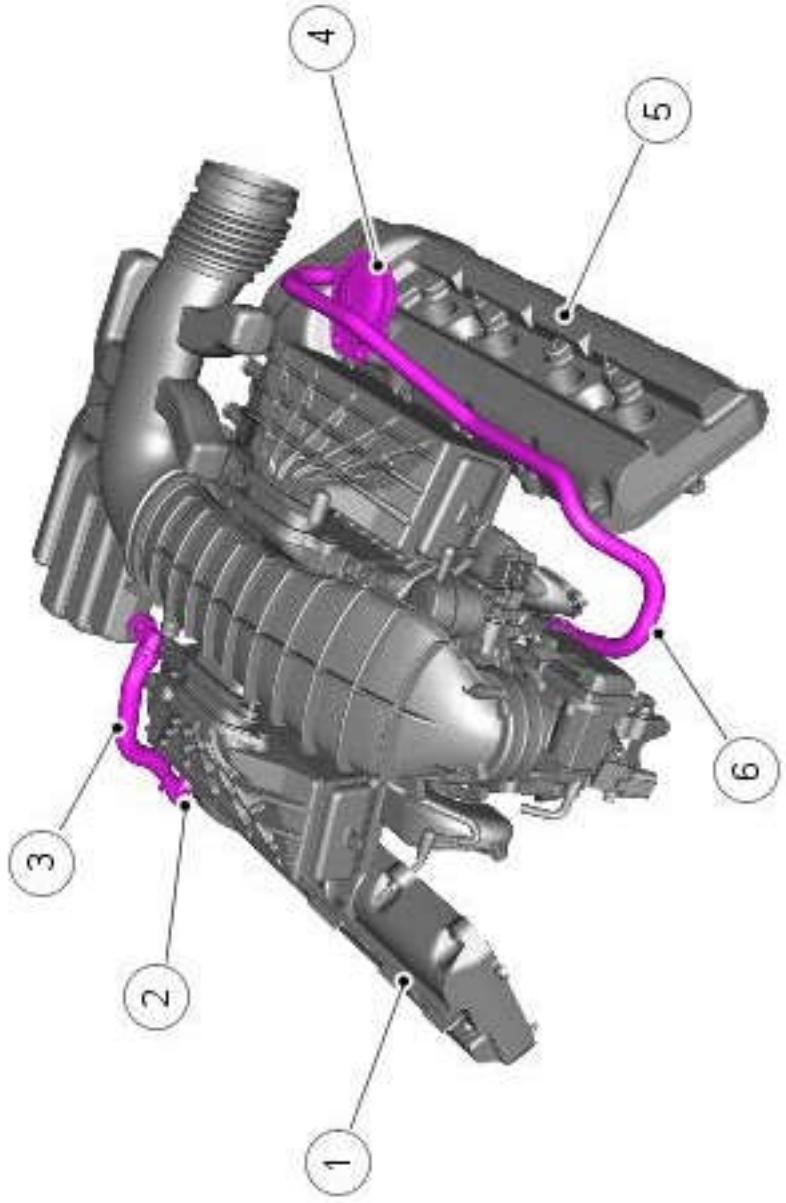

E56079

Item	Part Number	Description
1	-	Cylinder head cover bank B
2	-	Part load breather valve
3	-	Part load breather hose
4	-	positive crankcase ventilation (PCV) valve
5	-	Cylinder head cover bank A
6	-	PCV hose

The V8 engine is ventilated through a part load and a full load breather.

The part load breather is a flexible composite hose connected between the PCV valve and the induction elbow at the rear of the engine. The PCV valve prevents reverse flow into the crankcase.

PCV Valve