

E82731

16. Disconnect the RH engine mount vacuum line.


17. Remove the RH engine mount.

- Using a suitable hydraulic jack, raise and support the engine.

18. NOTE: Vehicles without snorkel installed.

- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

Remove and discard the bolt.

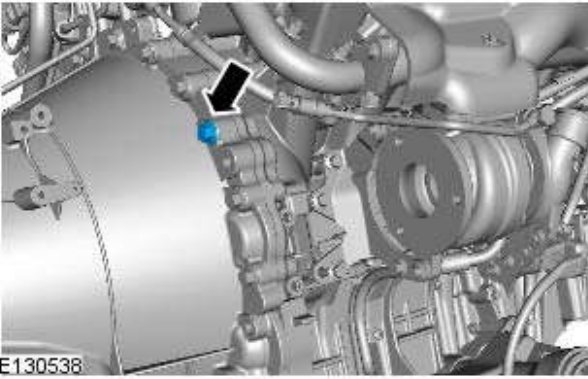

E130538


Installation

1. NOTE: Vehicles without snorkel installed.

- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

Install the stud.

- Tighten to 45 Nm (33 lb.ft)

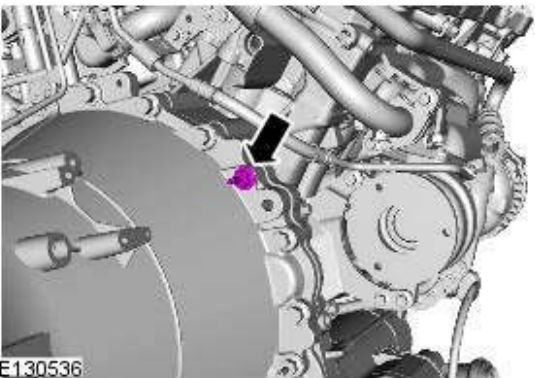

E130536

2. Install the RH engine mount.


3. Connect the RH engine mount vacuum line.

4. Secure the starter motor.

- Clean the component mating faces.
- Tighten the bolts to 45 Nm (33 lb.ft).

5. Connect the battery positive cable.


- Tighten the nut to 22 Nm (16 lb.ft).

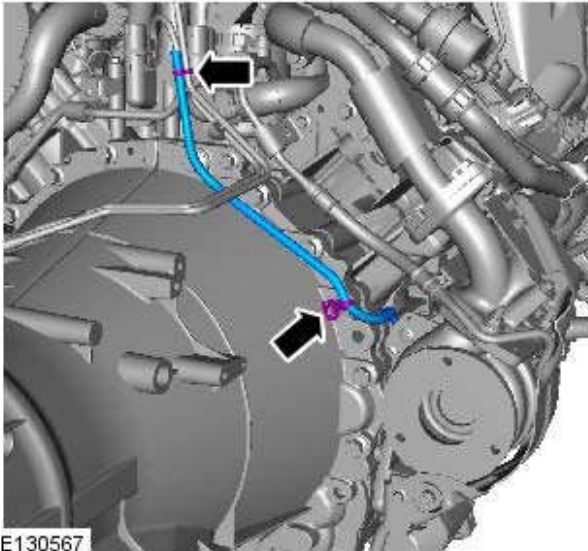

E130567

7. Route the snorkel tube as shown.

- Secure the clips.

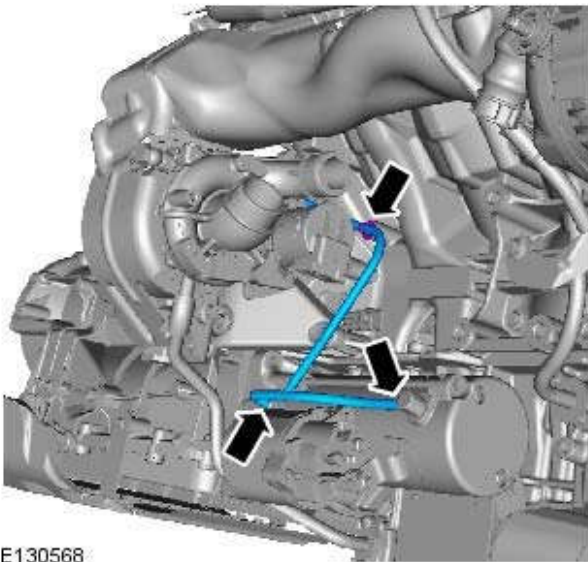

E130568

8. Fit the snorkel tube to the starter motor.

- Connect the 2 snorkel tubes.
- Secure the clip.

9. Install the transmission undershield.

- Tighten the bolts to 10 Nm (7 lb.ft).

10. Secure the RH engine mount.

- Lower the engine.
- Tighten the nut to 100 Nm (74 lb.ft).
- Tighten the bolts to 56 Nm (41 lb.ft).

11. NOTE: The heatshield consists of 3 parts.

Install the upper suspension arm and brake line heat shields.

- Install the bolts.
- Install the nuts.

12. Install the RH splash shield.