

Rear Drive Axle/Differential - Differential Locking Module

Removal and Installation

Removal

NOTES:



Some variation in the illustrations may occur, but the essential information is always correct.



Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. Remove the right luggage compartment upper trim.


Refer to: [Luggage Compartment Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Refer to: [Loadspace Trim Panel RH](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


4.

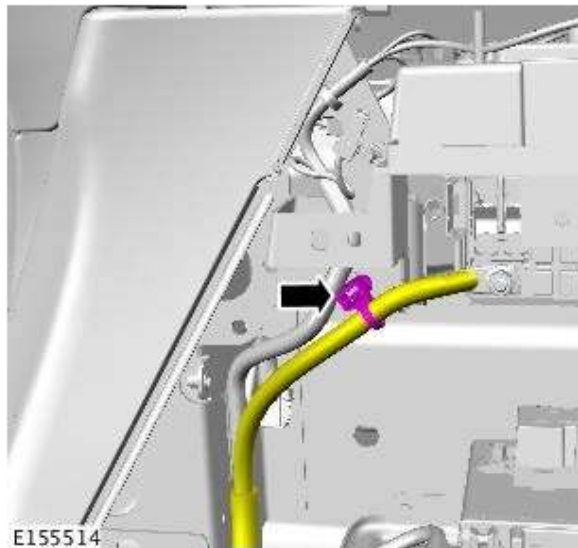


5.

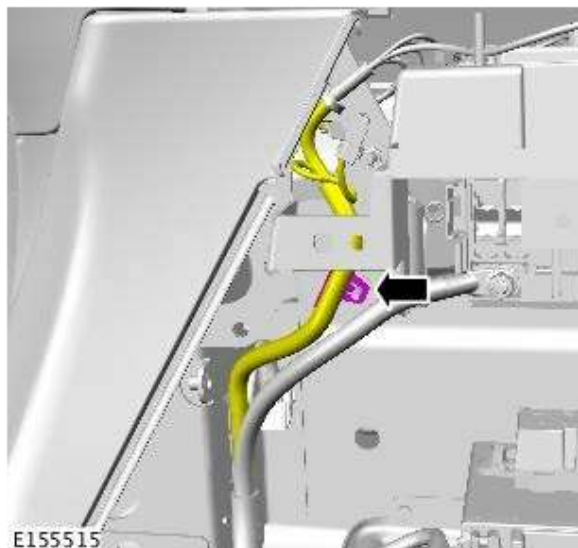

6. Torque: 7 Nm

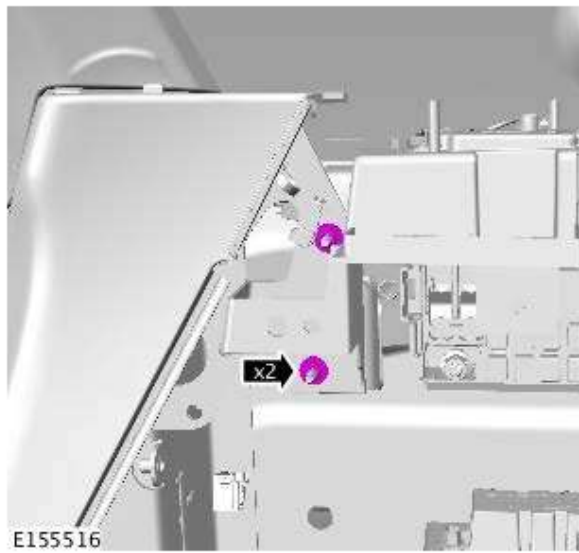


7. Torque: 7 Nm

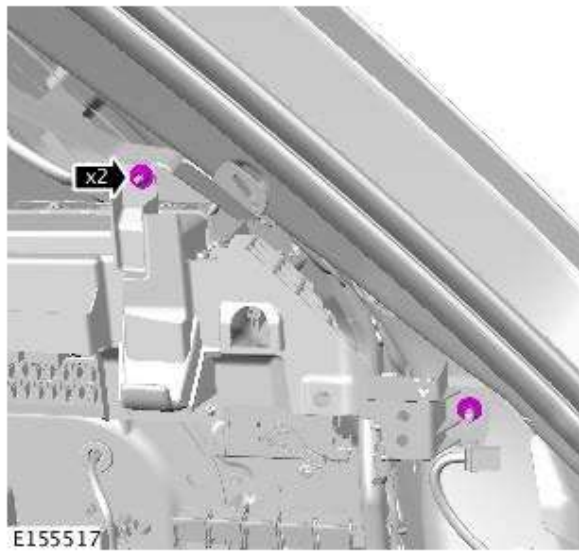

8.




9.

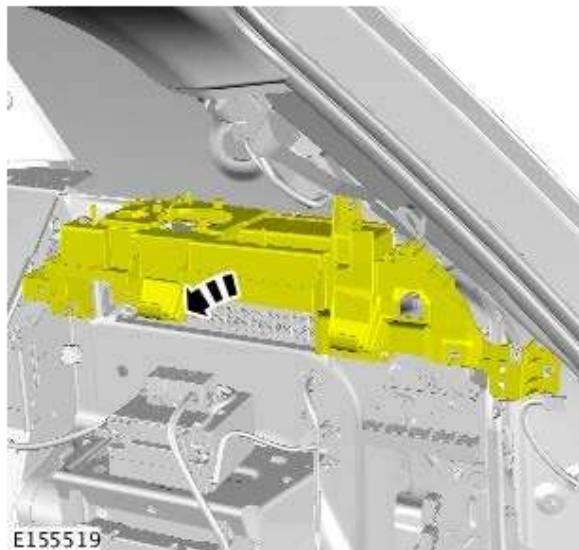


E155519

10.

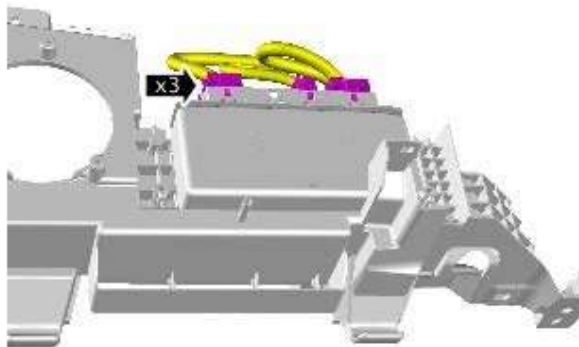

E155520

11. Torque: 7 Nm

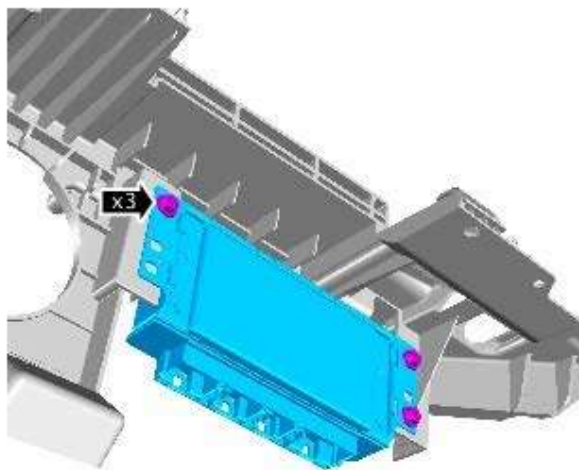

E155521

Installation

1. To install, reverse the removal procedure.
2. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

3. Using the approved diagnostic tool, calibrate the module.