


Plenum Chamber (80.15.62)

Removal

- 1 . Remove the A-pillar mouldings.
For additional information, refer to [A-Pillar Moulding LH](#)
- 2 . Remove the windshield wiper arms.
For additional information, refer to [Front Wiper Pivot Arm \(84.15.02\)](#)
- 3 . Release the hood seal from the plenum chamber.

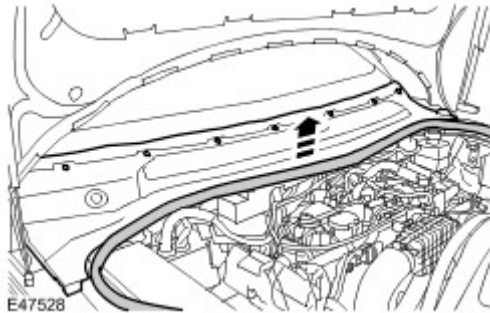


- 4 . Remove the plenum chamber panel.
▶ Release the 8 clips.

5 . **NOTE:**

Do not disassemble further if the component is removed for access only.

Remove the clips from the plenum chamber panel.

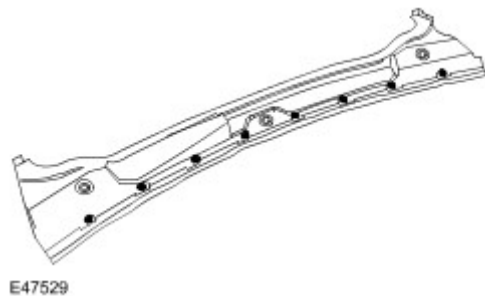

Installation

- 1 . To install, reverse the removal procedure.