

Publication Part No. JLR 18 55 21 1E

All paper copies are uncontrolled.




AREA 'G' REAR ROOF



CONNECTOR QUICK REFERENCE GUIDE (Grounds only)

Publication Part No. JLR 18 55 21_1E

All paper copies are uncontrolled.
AREA 'G'
REAR ROOF

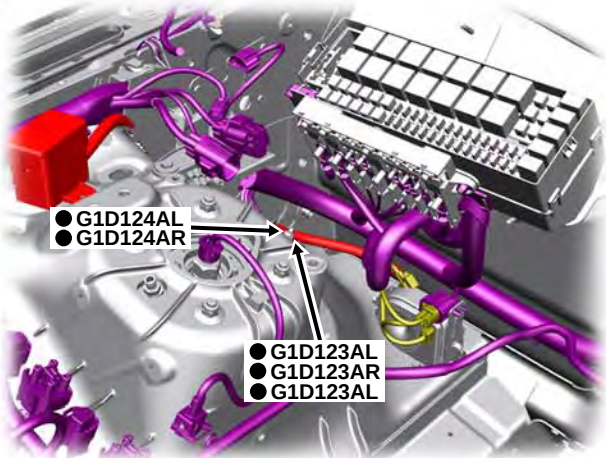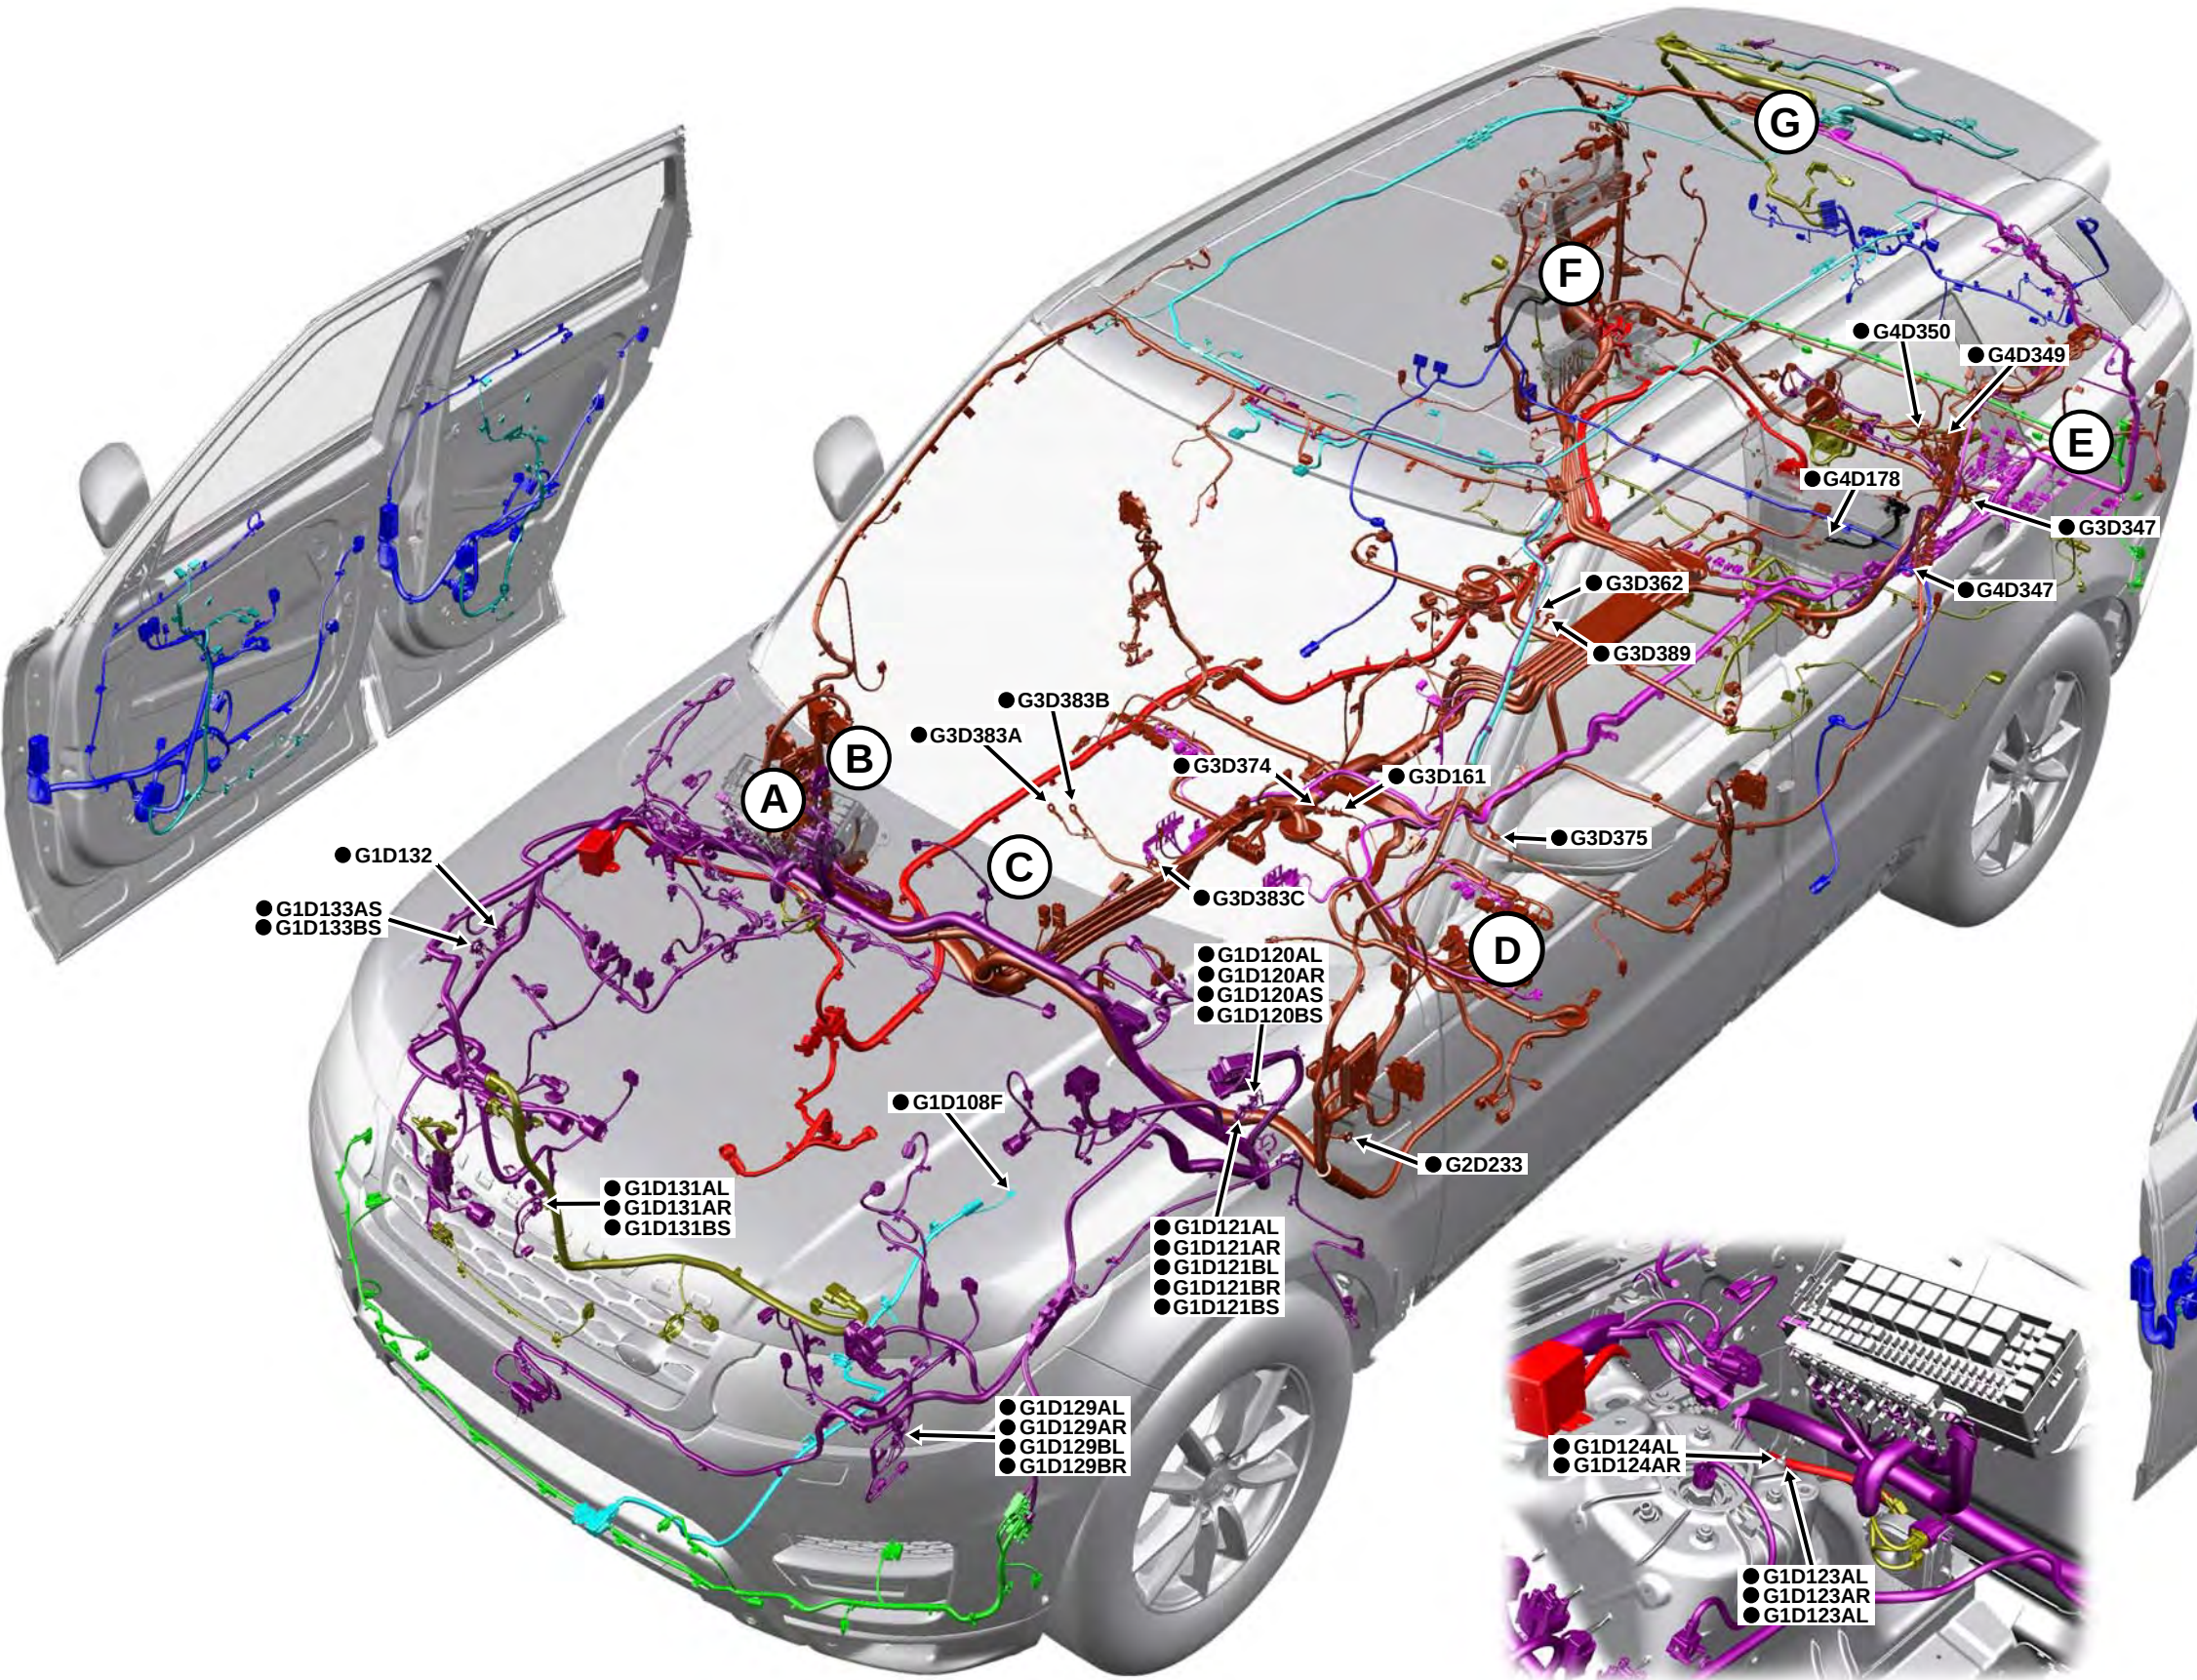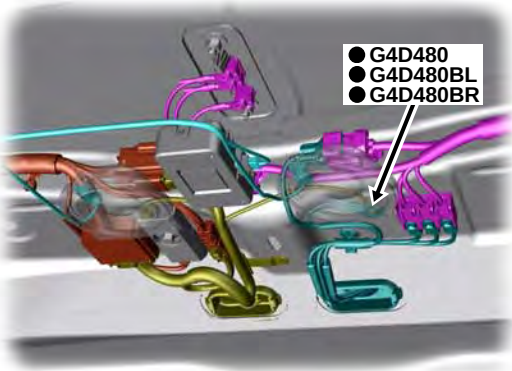

AREA 'A'
ENGINE JUNCTION BOX



Key to connectors designators:
Components - black text, e.g. C4LS45A
Inlines - white text, e.g. C11F
Grounds - black text preceded by a dot, e.g. ● G2D114
Diesel only - designator preceded by an asterisk, e.g. * C1E513A

CONNECTOR QUICK REFERENCE GUIDE (In-lines only)


Publication Part No. JLR 18 55 21_1E

All paper copies are uncontrolled.

AREA 'G'
REAR ROOF

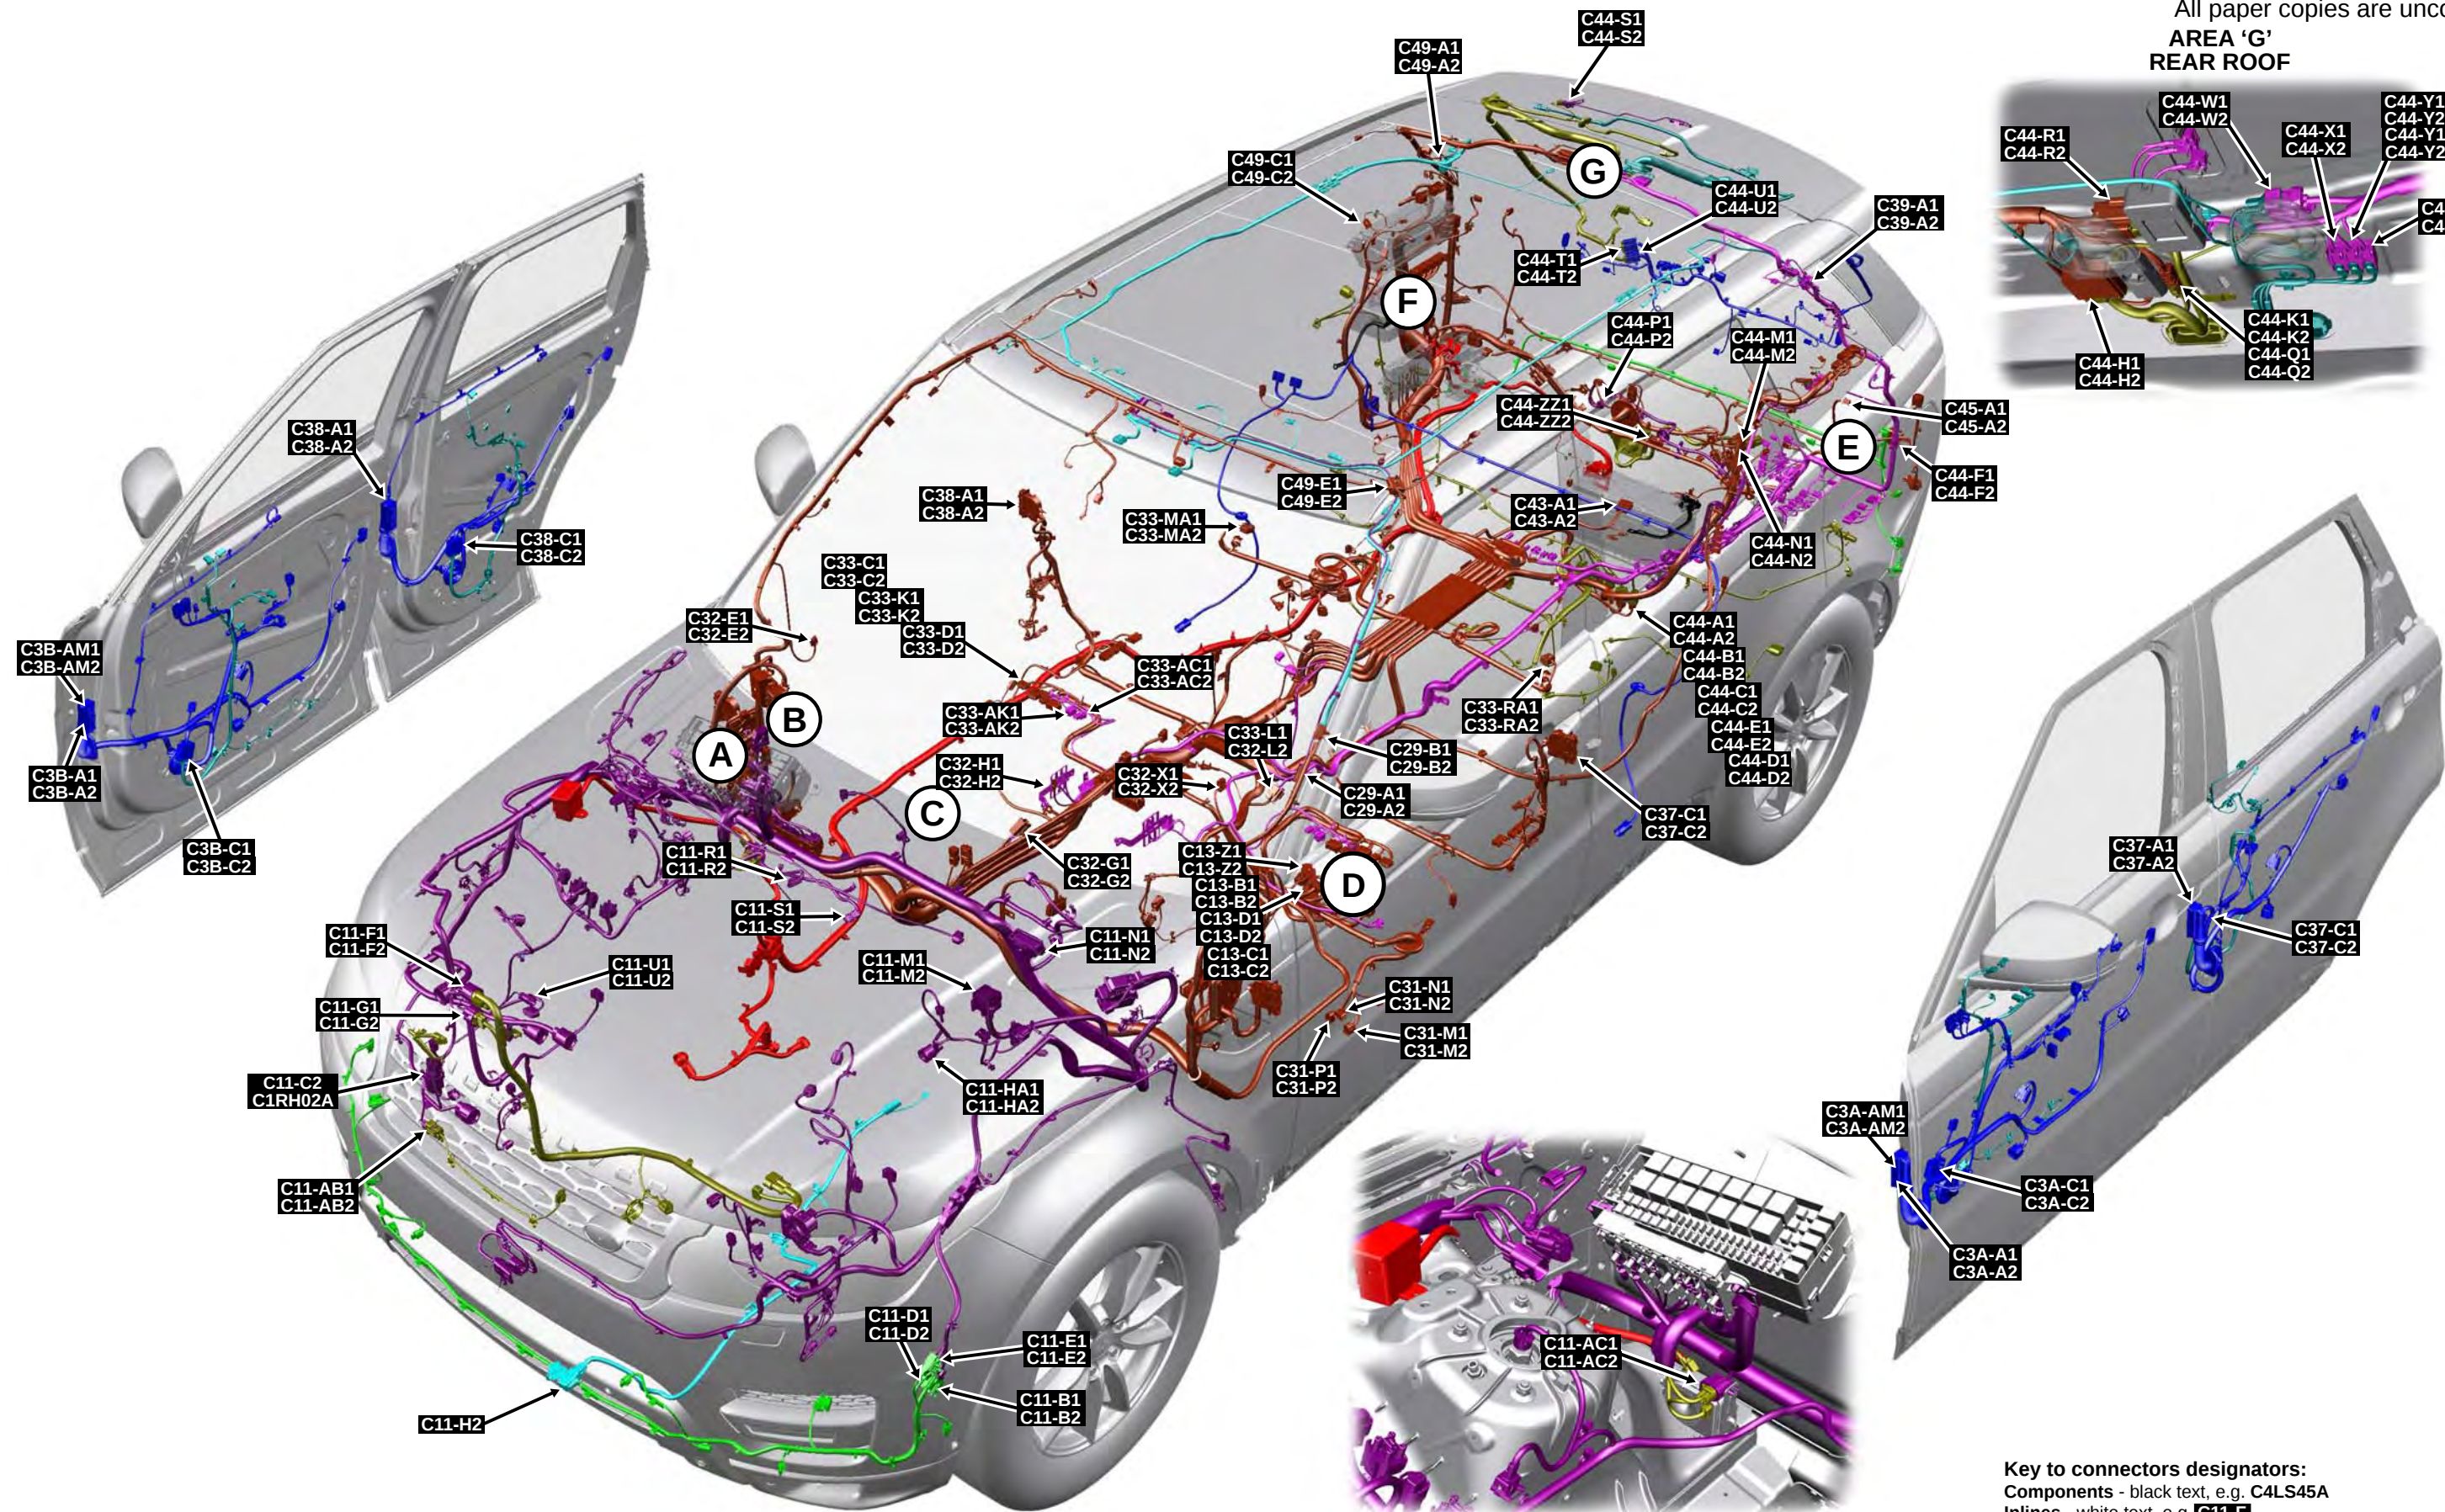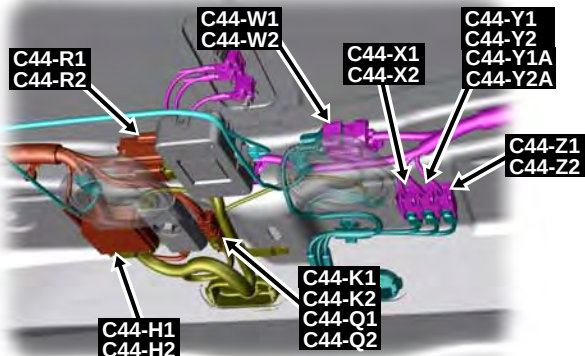


AREA 'A'
ENGINE JUNCTION BOX

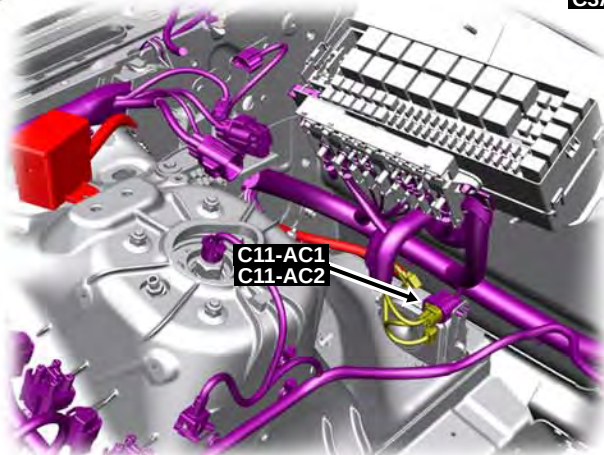

Key to connectors designators:
Components - black text, e.g. C4LS45A
Inlines - white text, e.g. C11-F
Grounds - black text preceded by a dot, e.g. ●G2D114
Diesel only - designator preceded by an asterisk, e.g. *C1E513A


Publication Part No. JLR 18 55 21 1E

AREA 'C' - INSTRUMENT PANEL AND CONSOLES

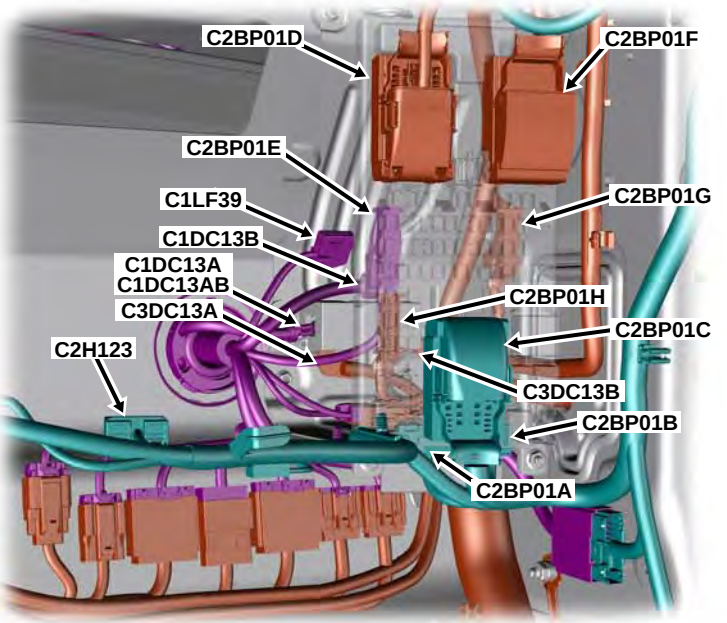

AREA 'B'


CENTRAL JUNCTION BOX

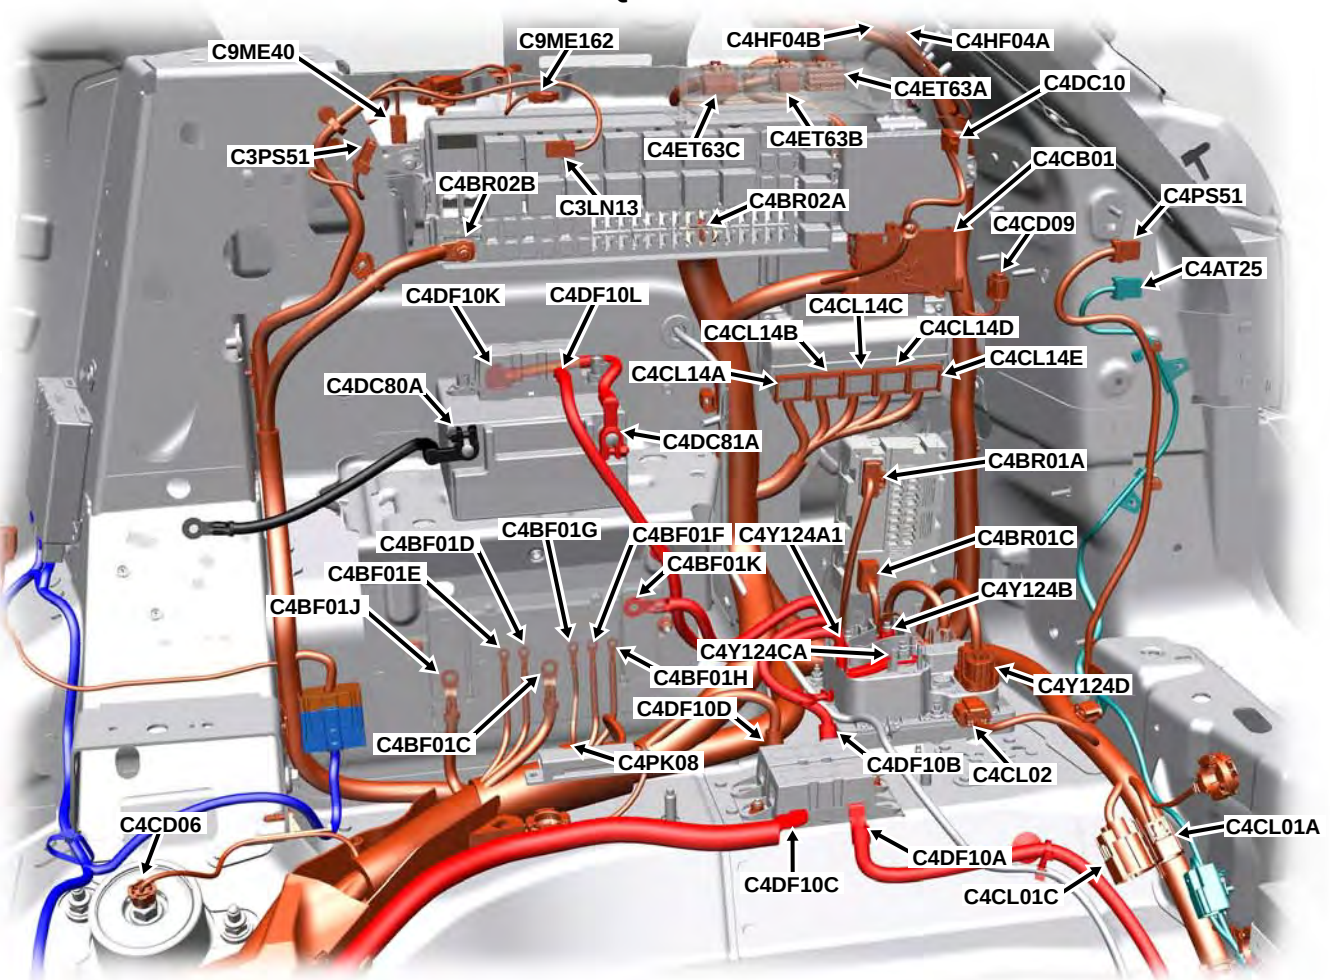



CONNECTOR QUICK REFERENCE GUIDE (Grounds only)

All paper copies are uncontrolled.


AREA 'C' - INSTRUMENT PANEL AND CONSOLES

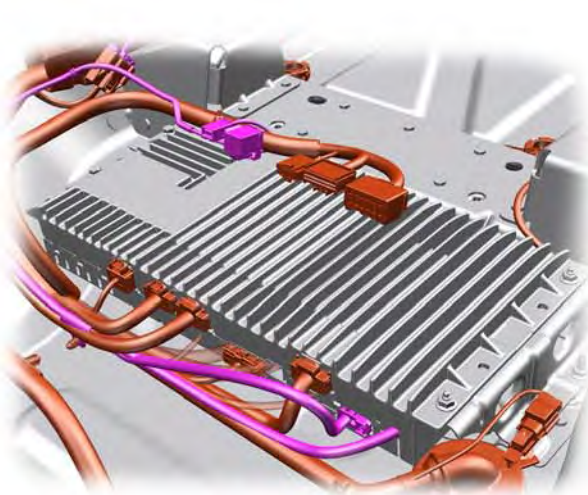



AREA 'D'
BELOW SEAT - FRONT LEFT

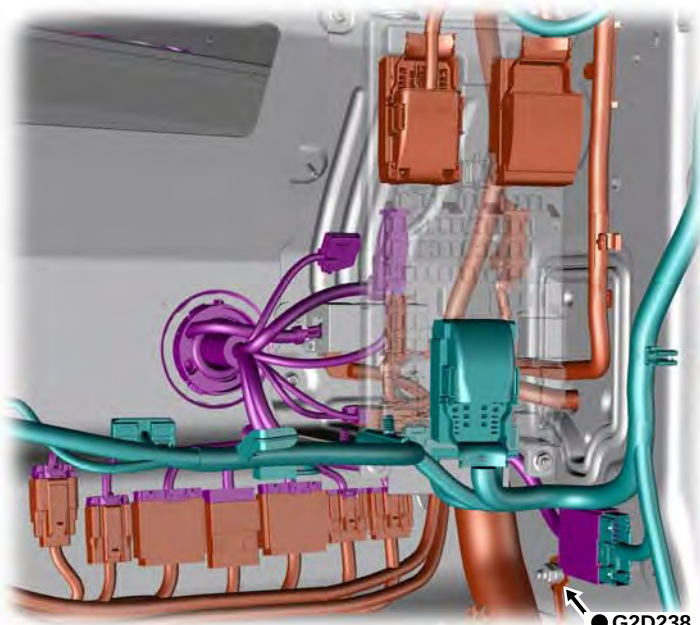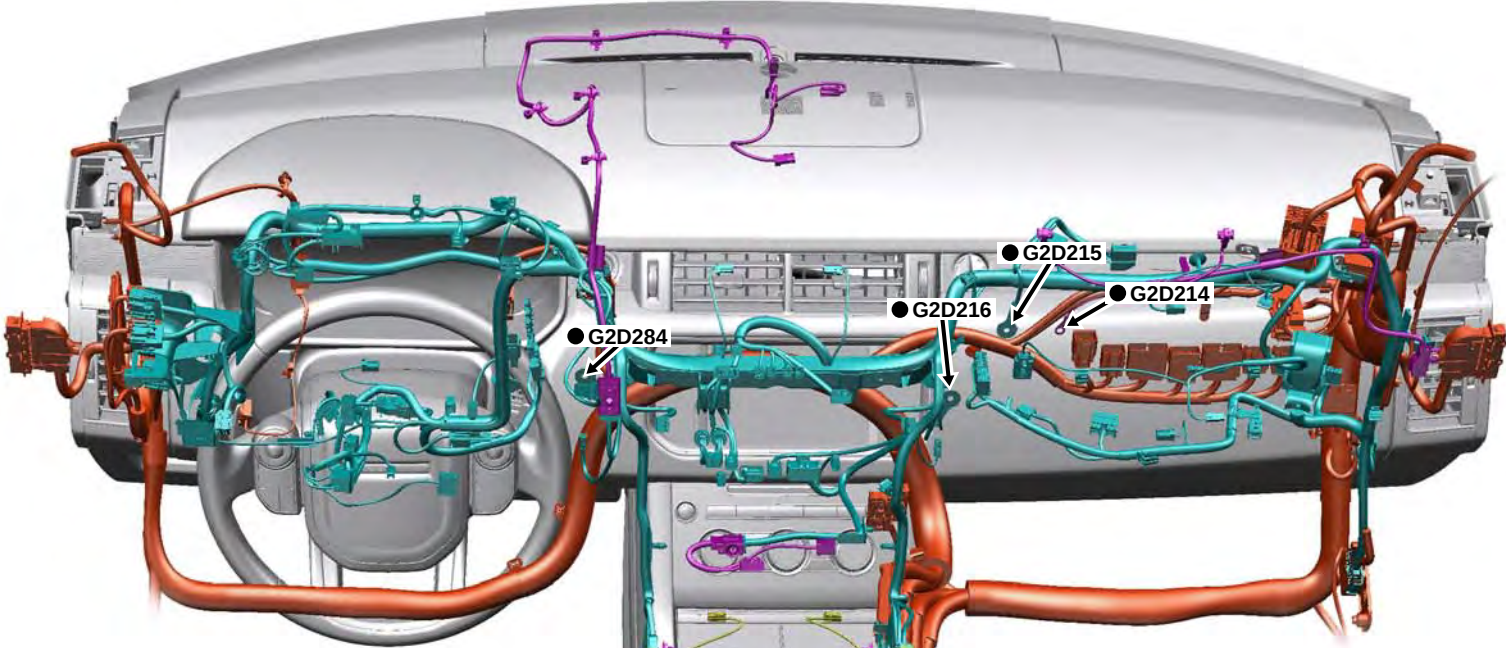

AREA 'B'
CENTRAL JUNCTION BOX

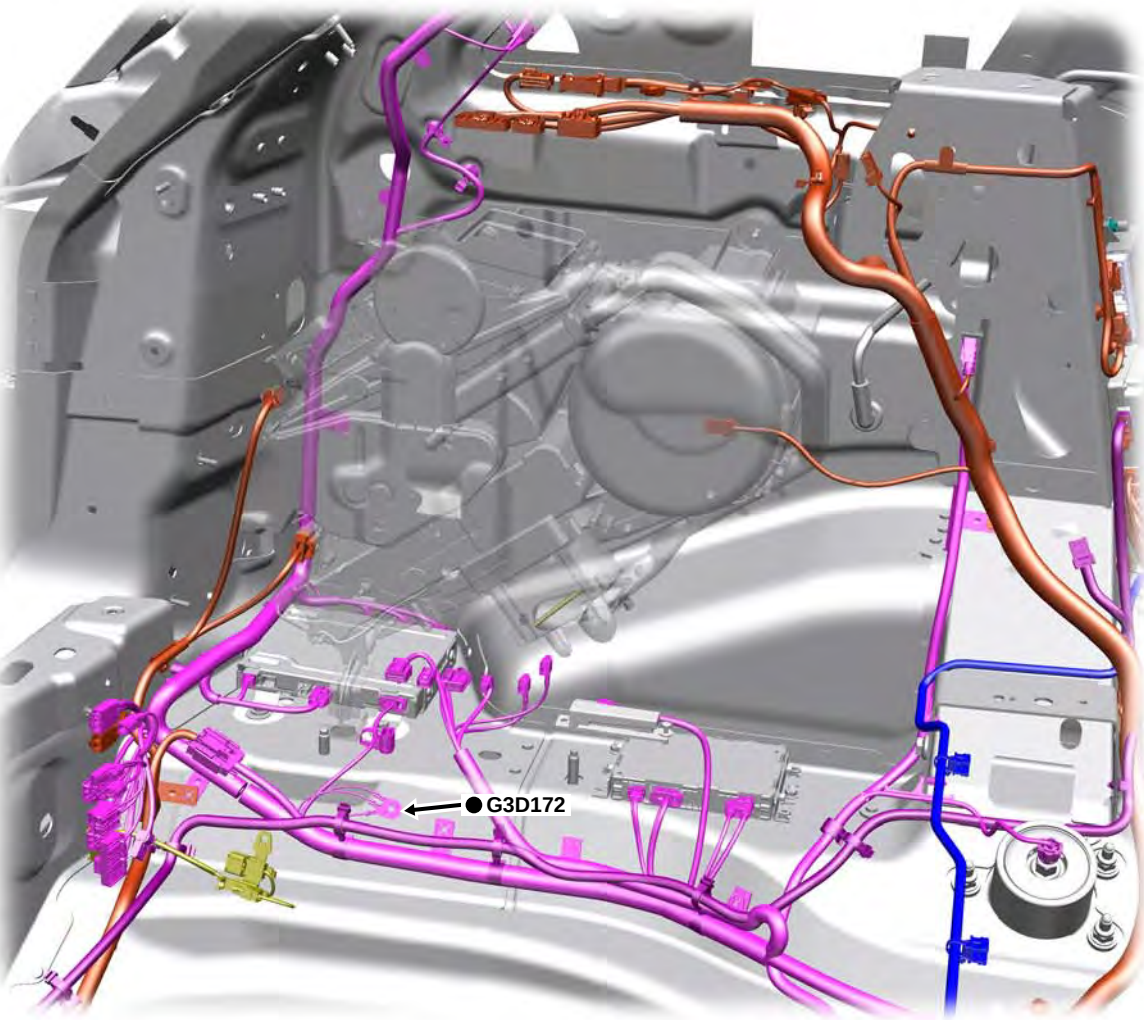

AREA 'E'
REAR QUARTER - LEFT

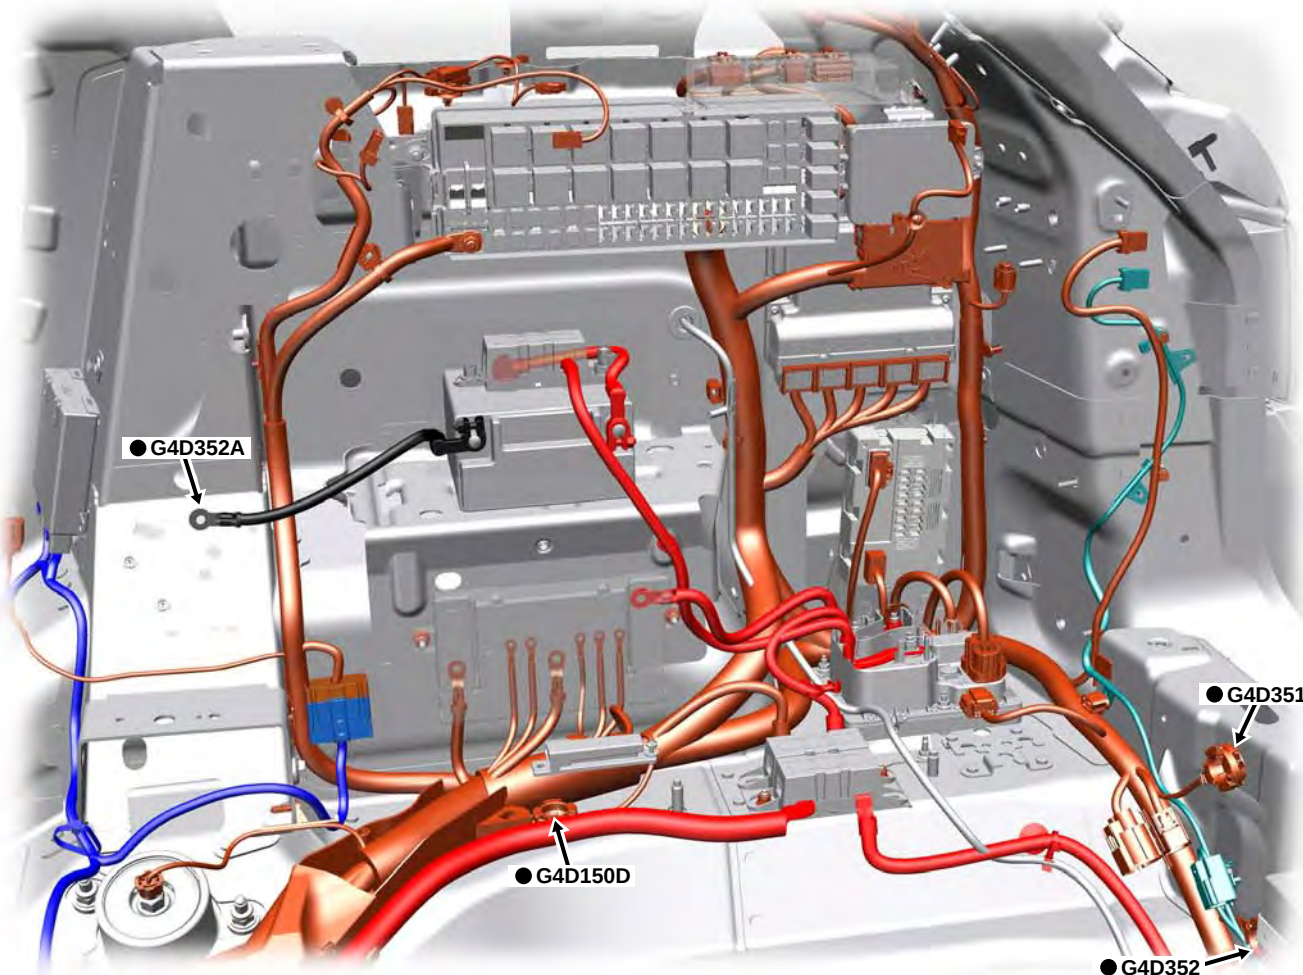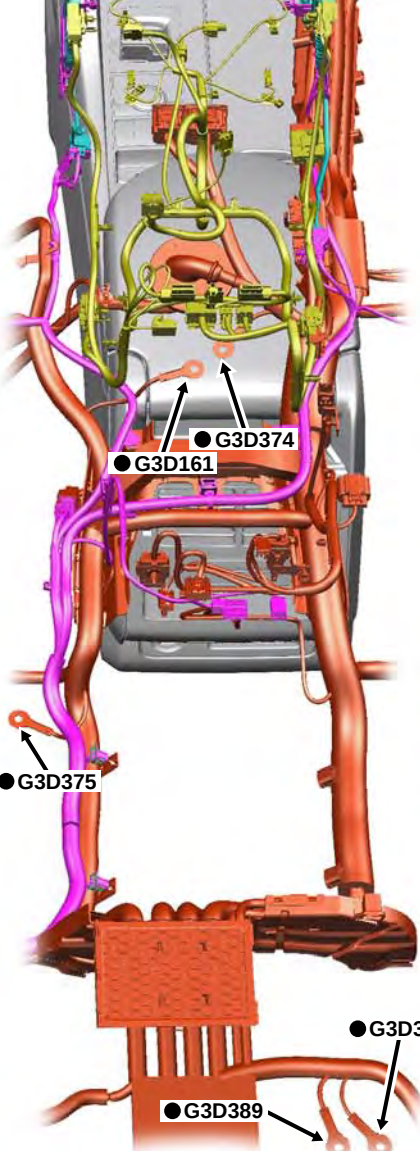

AREA 'F'
REAR QUARTER - RIGHT

CONNECTOR QUICK REFERENCE GUIDE (In-lines only)

All paper copies are uncontrolled.

AREA 'C' - INSTRUMENT PANEL AND CONSOLES

