

Front Door Trim Panel (76.34.01)

Removal


1 . Remove the cheater panel.

- ▶ Carefully release the 3 clips.
- ▶ Disconnect the 2 electrical connectors.




2 . Starting at the lower edge, carefully remove the grab handle cover.

- ▶ Release the 3 clips.

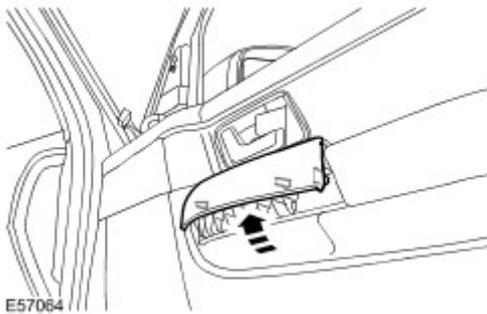


3 . Release the front door trim panel.

- ▶ Release the 2 screw covers.
- ▶ Remove the 5 screws.
- ▶ Release the 16 clips.


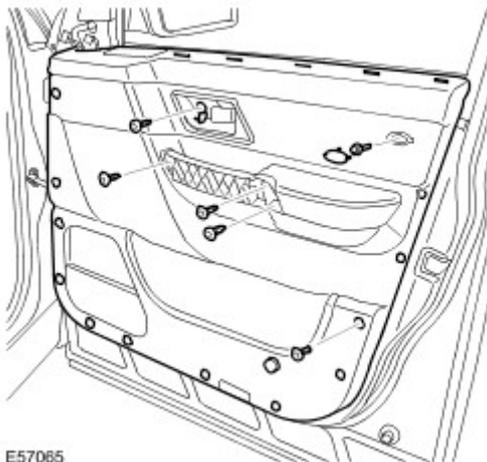


4 . Disconnect the door latch remote release cable.

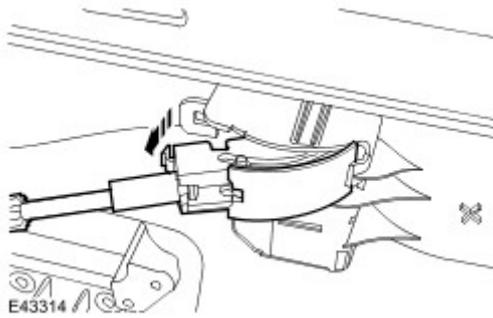

5 . Remove the front door trim panel.

▶ Disconnect the 5 electrical connectors.

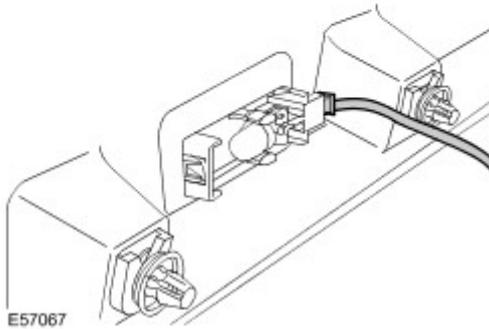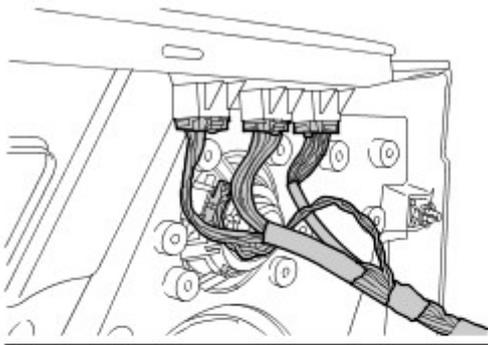


6 . **NOTE:**

Do not disassemble further if the component is removed for access only.

Remove the puddle lamp.

▶ Carefully release the lamp.

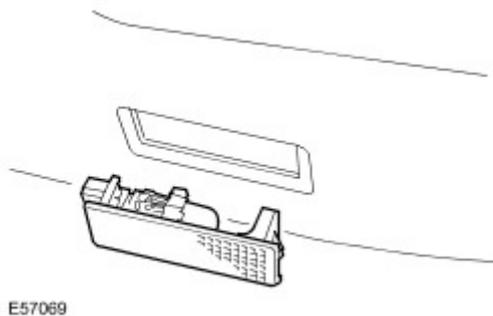


7 . Remove the speaker.

▶ Remove the 3 Torx screws.




8 . Remove the window control switch.

▶ Carefully release the 4 clips.

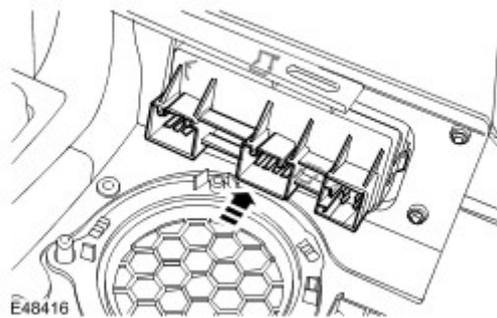

9 . Remove the front door latch remote control handle.


▶ Starting at the lower edge, carefully release the remote handle.

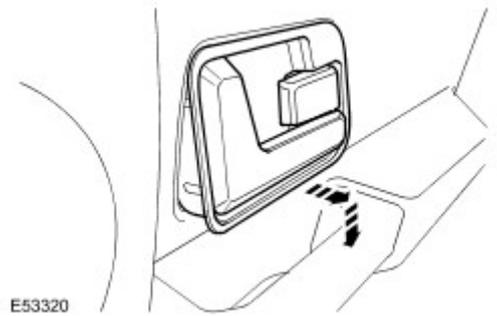


10 . Remove the trim panel finisher.

11 . Remove the door panel finisher retainer.

12 . Remove the door latch remote control handle retainer.

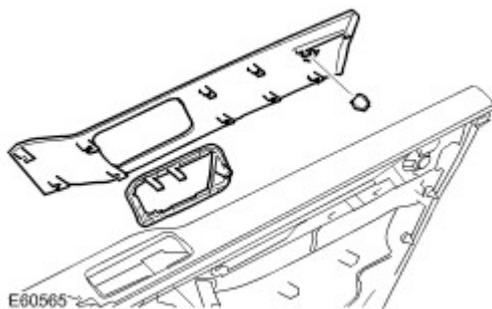

13 . Remove the 11 clips.

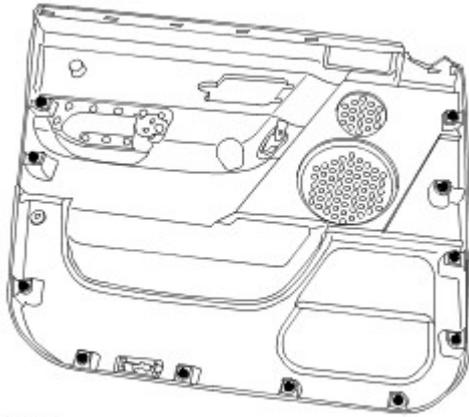

E57072

Installation

- 1 . Install the clips.
- 2 . Install the door latch remote control handle retainer.
- 3 . Install the door panel finisher retainer.
- 4 . Install the trim panel finisher.
- 5 . Install the front door latch remote control handle.
- 6 . Install the window control switch.
- 7 . Install the speaker
 - ▶ Tighten the Torx screws.
- 8 . Install the puddle lamp.
- 9 . Install the front door trim panel.
 - ▶ Connect the door latch remote control cable.
 - ▶ Connect the electrical connectors.
 - ▶ Secure with the clips.
 - ▶ Tighten the screws.
 - ▶ Install the screw covers.
- 10 . Install the grab handle cover.
- 11 . Install the cheater panel.
 - ▶ Connect the electrical connectors.
 - ▶ Secure the clips.