


Rear Bumper Cover (76.22.74)


Removal

All vehicles

1. Disconnect the battery ground cable.
For additional information, refer to [Specifications](#)
2. Remove both rear lamp assemblies.
For additional information, refer to [Rear Lamp Assembly \(86.40.70\)](#)
3. Remove the rear bumper towing eye cover.
▶ Release the 2 clips.

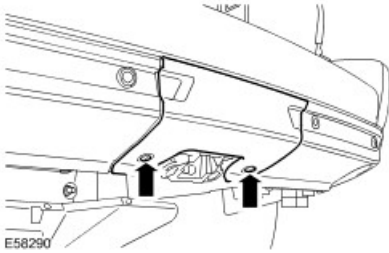

4. Release the liftgate seal.

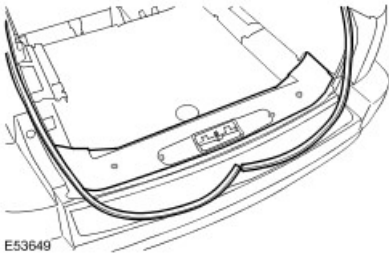


Vehicles with parking aid

5. Disconnect the parking aid sensor wiring harness electrical connector




All vehicles

6. Remove the bumper scuff plate.
▶ Carefully release the 10 clips.

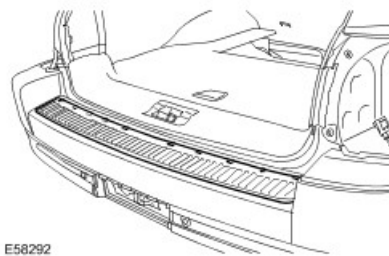


7. Remove the bumper cover lower fixings.
▶ Remove the 6 screws.

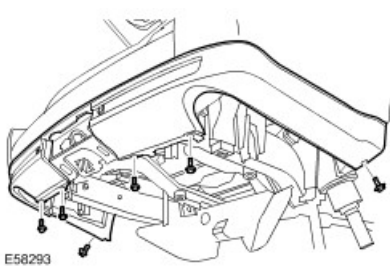

E58293

8 . Remove the bumper cover upper fixings.

- ▶ Remove the 4 clips.
- ▶ Remove the 2 screws.

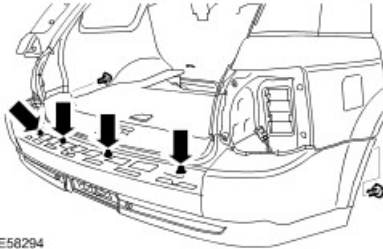

E58294

9 . With assistance, remove the rear bumper cover.

- ▶ Carefully release the 10 clips.




E58295

10 . **NOTE:**

Do not disassemble further if the component is removed for access only.

Release the parking aid sensor wiring harness.

- ▶ Release and disconnect the 4 electrical connectors.
- ▶ Release the 16 clips.

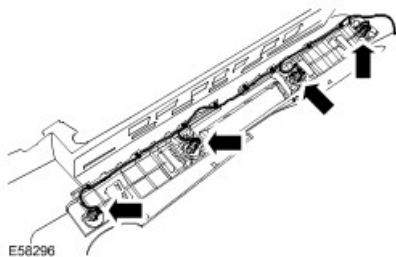


E58296

Vehicles with parking aid

11 . Remove the parking aid sensor.


- ▶ Release the 2 clips.
- ▶ Repeat the above procedure for the remaining 3 sensors.

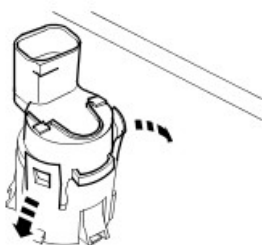

E45116

12 . Remove the parking aid sensor trim panel.


- ▶ Release the 3 clips.
- ▶ Repeat the above procedure for the remaining 3 sensor trim panels.

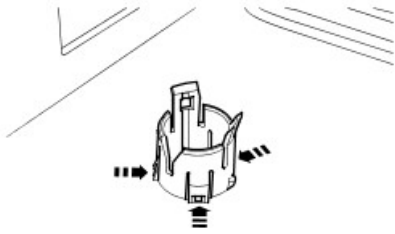

E45117


13 . Remove the LH harness support trim panel.

- ▶ Release the 4 clips.
- ▶ Repeat the above procedure for the other side.

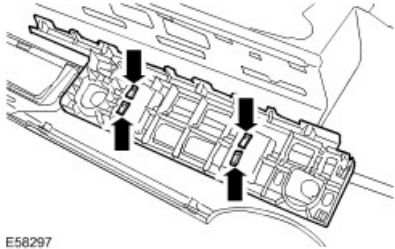

E58297

14 . Remove the 6 clips.

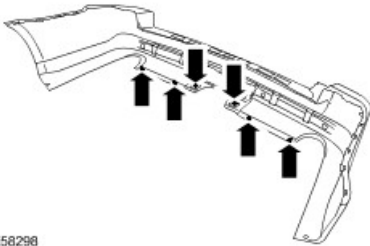

E58298

Installation

All vehicles

- 1 . Install the clips.
- 2 . Install the harness support trim panels.
 - ▶ Secure the clips.

Vehicles with parking aid

- 3 . Install the parking aid sensor trim panels.
- 4 . Install the parking aid sensors.
- 5 . Install the parking aid sensor wiring harness.
 - ▶ Connect the electrical connectors.


All vehicles

- 6 . Install the rear bumper cover.
 - ▶ Secure in the clips.
 - ▶ Install the screws.
- 7 . Install the bumper scuff plate.
 - ▶ Secure the clips.

Vehicles with parking aid

- 8 . Connect the parking aid sensor wiring harness electrical connector.

All vehicles

- 9 . Install the liftgate seal.
- 10 . Install the towing eye cover.
 -  Secure the clips.
- 11 . Install both of the rear lamp assemblies.
For additional information, refer to [Rear Lamp Assembly \(86.40.70\)](#)
- 12 . Connect the battery ground cable.
For additional information, refer to [Specifications](#)