


Rear Spoiler Removal

1. Disconnect the battery ground cable.
2. Open the liftgate glass

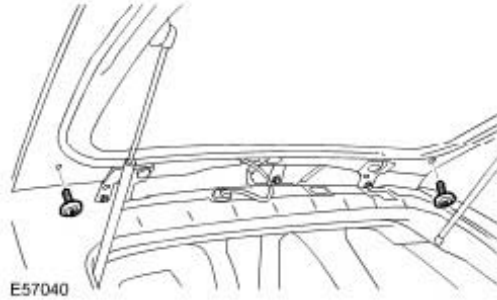


Remove the 2 Torx bolts.
Close the liftgate glass.

3. Open the liftgate.



Remove the 3 nuts.
Close the liftgate.

4. Remove the rear spoiler.

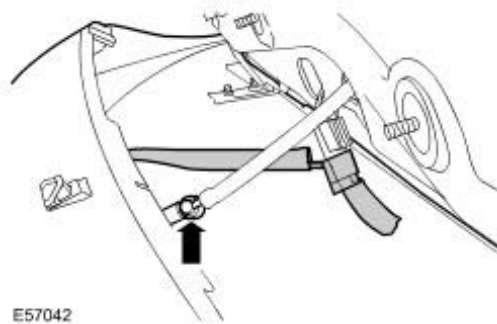

Disconnect the electrical connector.
Disconnect the washer jet hose.

5. NOTE: Do not disconnect further if the component is removed for access only.

Remove the CHMSL.



Remove the 4 Torx screws.



6. Remove the 2 clips.
7. Remove the washer jet.

Release the clip.

Installation

- 1 . Install the high mounted stoplamp.
Install the Torx screws.
- 2 . Install the washer jet.
- 3 . Install the 2 clips.
- 4 . Install the spoiler.

Connect and secure the electrical connector.

Connect the washer jet hose.

Tighten the nuts to 10 Nm (7 lb.ft).

Tighten the Torx bolts to 25 Nm (18 lb.ft).

- 5 . Connect the battery ground cable.